Scottoiler: Suzuki TL 1000 S (1998 - 1999)

Scottoiler vSystem Installation Guide





Locate the vacuum - there is a vacuum pipe from a spigot on the inlet tract. Cut into this pipe and insert the T-Piece from the Scottoiler kit. Then press the Damper Elbow, part number 4, onto the third leg of the tee. For further information see our easy step installation guide - <u>Vacuum Connections, General</u>. See picture below left



Note: Cut into the engine side of the check valve





The RMV can be mounted under the seat. The more vertical the RMV the better and remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Reservoir Positions, General.

See third picture

The Dispenser Assembly can be secured to the paddock stand bobbin mount using the small Dispenser Plate & Clip, parts 20 & 21. The delivery tubing can be routed along the swing arm using conduit, cable ties and glue or self adhesive cable clips. For further information see our easy step installation guide - <u>Dispenser Assemblies, General</u>. The nib should feed the rear sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards.

See picture bottom left

Once fitted, <u>fill and prime</u> the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoiler using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoiler to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoiler Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

