Scottoiler: Yamaha YBR 125 Fi 2009 onwards

Scottoiler vSystem Installation Guide

Note: The HCR (sold separately) is not compatible with this model, we recommend the <u>Lube Tube</u> instead The Dual Injector (sold separately) is not compatible with this model.





Locate the vacuum — Remove the inlet manifold and drill a 4mm hole in one side. Tap the hole using an M5 tap and fit the M5 Spigot, part number 5, using an RTV silicon type sealant to ensure an airtight seal. Reinstall the manifold and then press the Damper Elbow, part number 4, onto the spigot. Caution: Remove any drilling Swarf / loose material from the manifold before re-installation. For further information see our easy step installation guide - Vacuum Connections, General See picture below left



The RMV can be mounted to the frame. The more vertical the RMV the better and remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Resrvoir Positions, General.

See third picture



Note: Looking from Left Hand Side of bike

The delivery tubing can be routed along the swingarm using conduit and glue or self adhesive cable clips and the dispenser can be secured on the rear spindle using a Dispenser plate & Clip. For further information see our easy step installation guide - <u>Dispenser Assemblies</u>, <u>General</u>. The nib should feed the rear sprocket between the 6 & 7 o'clock positions, with the cut face outwards.

See picture bottom left



Once fitted, <u>fill and prime</u> the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoiler using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoiler to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoiler Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

