


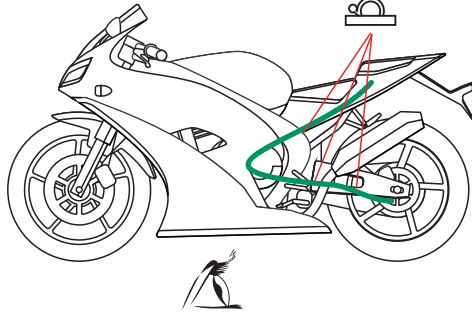
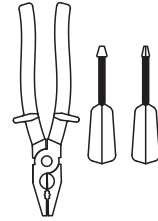


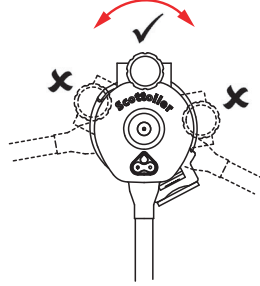


2

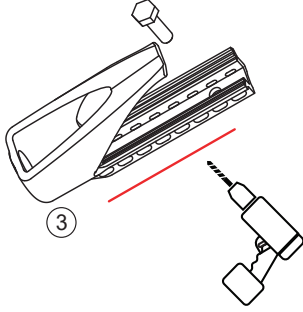

EN: FRAME MUST BE OIL FREE
DE: RAHMEN MUSS ÖLFREI SEIN
FR: CADRE DOIT ETRE EXEMPT D'HUILE
ES: NO DEBE HABER ACEITE EN EL BASTIDOR
IT: CORNICE DEVE ESSERE ESENTE DA OLIO
NL: HET FRAME MOET OLIEVRIJ ZIJN

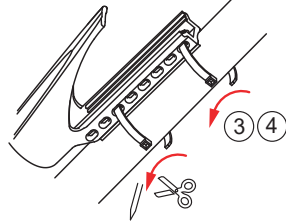

Tools Required

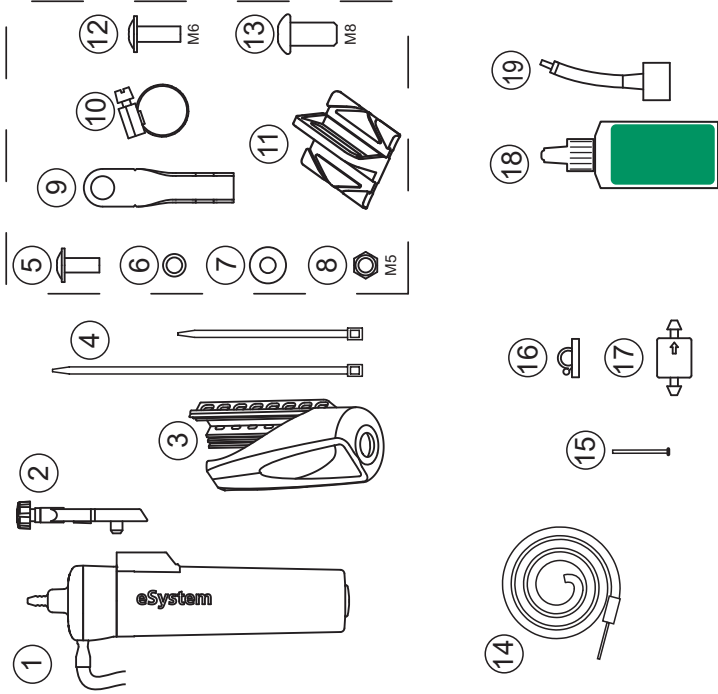


REpConnect
PLUG-IN eSYSTEM
INTEGRATED CHAIN OILER
SYSTEM FOR INTELLIGENT
ACCESSORY MANAGERS

www.scottoiler.com
 SCOTTOILER



register your product
www.scottoiler.com/warranty

installation videos
reconnect.scottoiler.com




installation guides
www.scottoiler.com/mybike
tips
www.scottoiler.com/tips

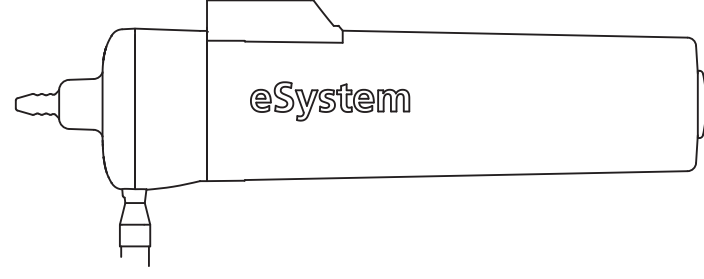

3A

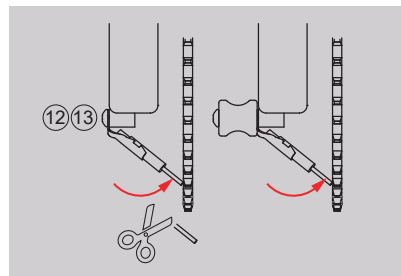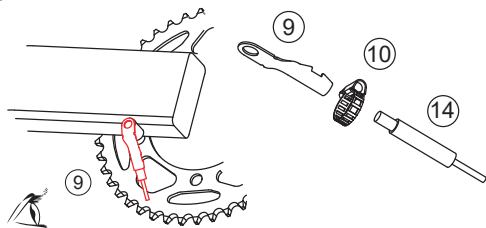


3B

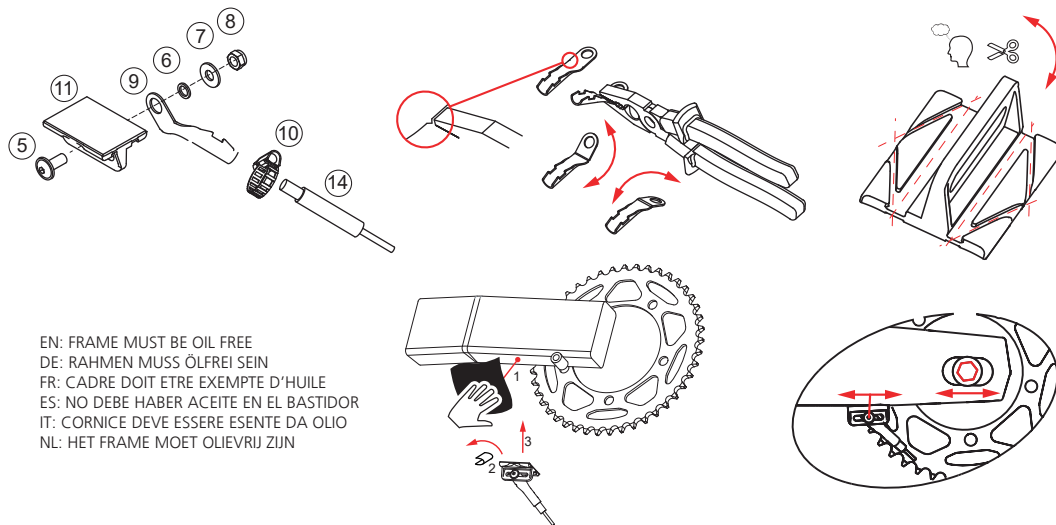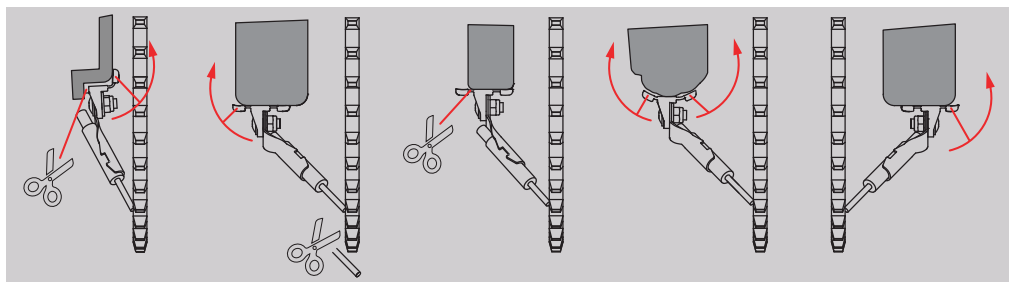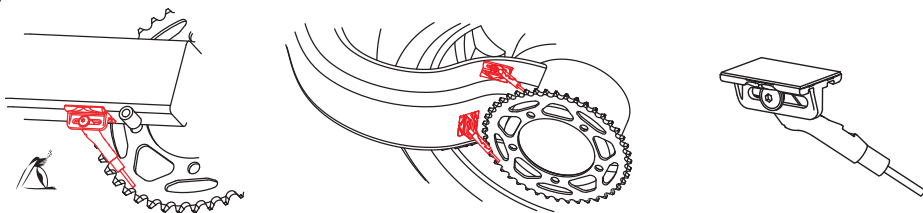


EN: FRAME MUST BE OIL FREE
 DE: RAHMEN MUSS ÖLFREI SEIN
 FR: CADRE DOIT ETRE EXEMPT D'HUILE
 ES: NO DEBE HABER ACEITE EN EL BASTIDOR
 IT: CORNICE DEVE ESSERE ESENTE DA OLIO
 NL: HET FRAME MOET OLIEVRIJ ZIJN

4

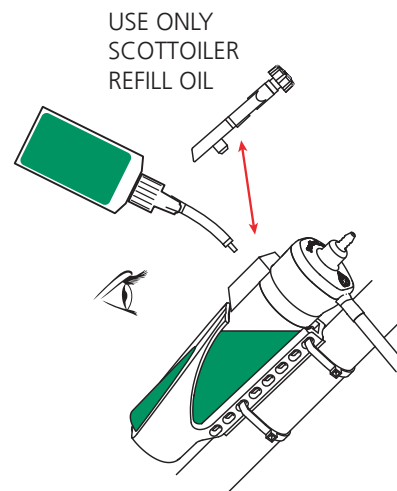

5

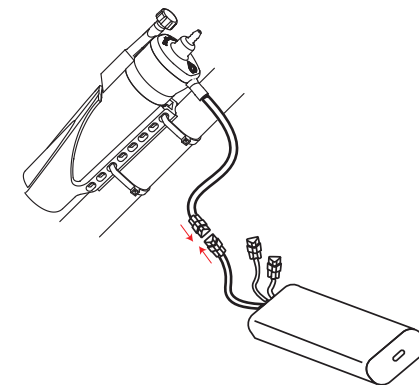

EN: INITIAL SETUP
 DE: ESYSTEM EINRICHTEN
 FR: LA CONFIGURATION INITIALE
 ES: CONFIGURACIÓN INICIAL
 IT: CONFIGURAZIONE INIZIALE

6

① Set fuse to 1 Amp

Start prime

Use the PRIME mode to continuously activate the pump. The ignition needs to be turned on to prime.

Flow rate

Flowrate can be set according to your preference. Default is 1 drop every 90 seconds.

Enable oiling

You can completely disable oiling when required.



Scan QR code for
 product information
 installation instructions

You can find more
 information and installation
 and setup videos on
reconnect.scottoiler.com

7

