




1

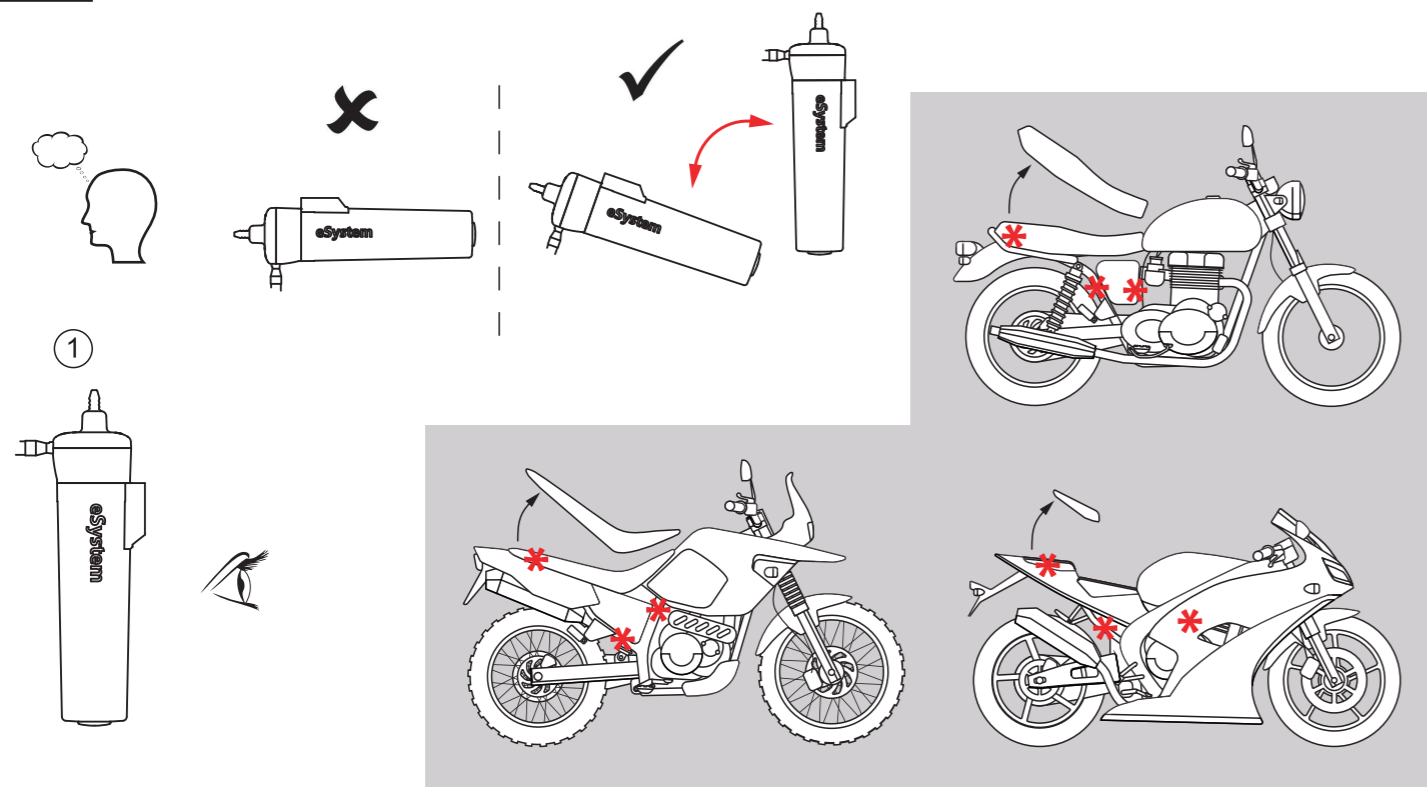


2

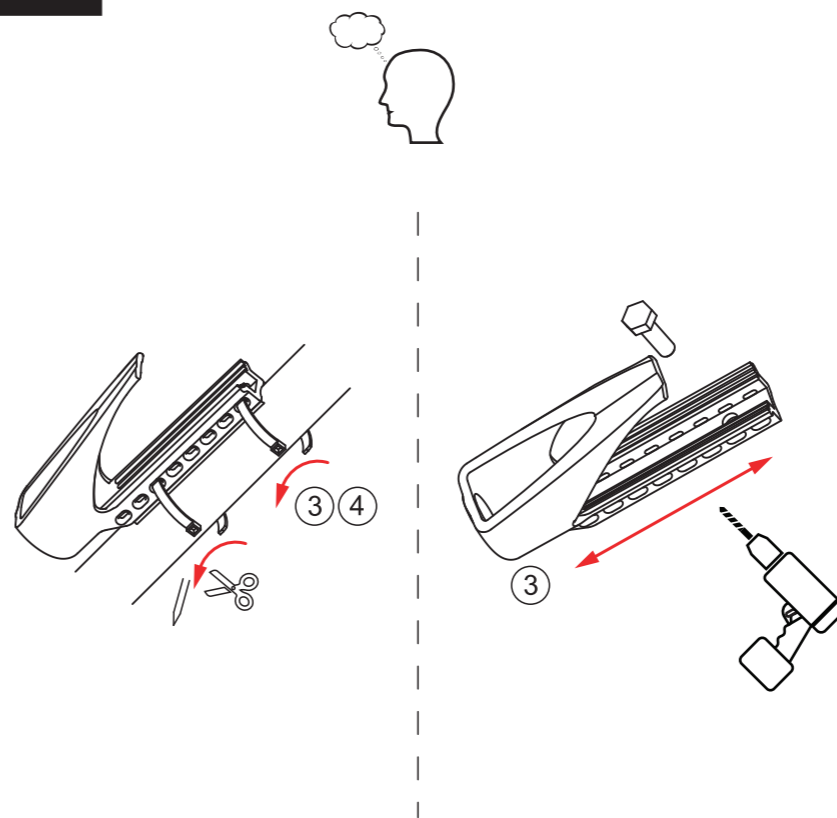


3

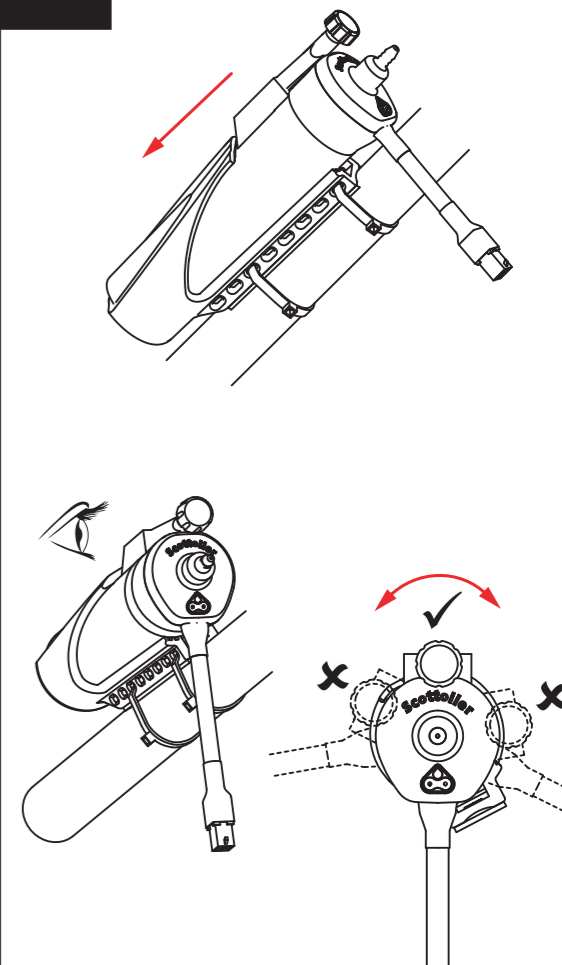


4

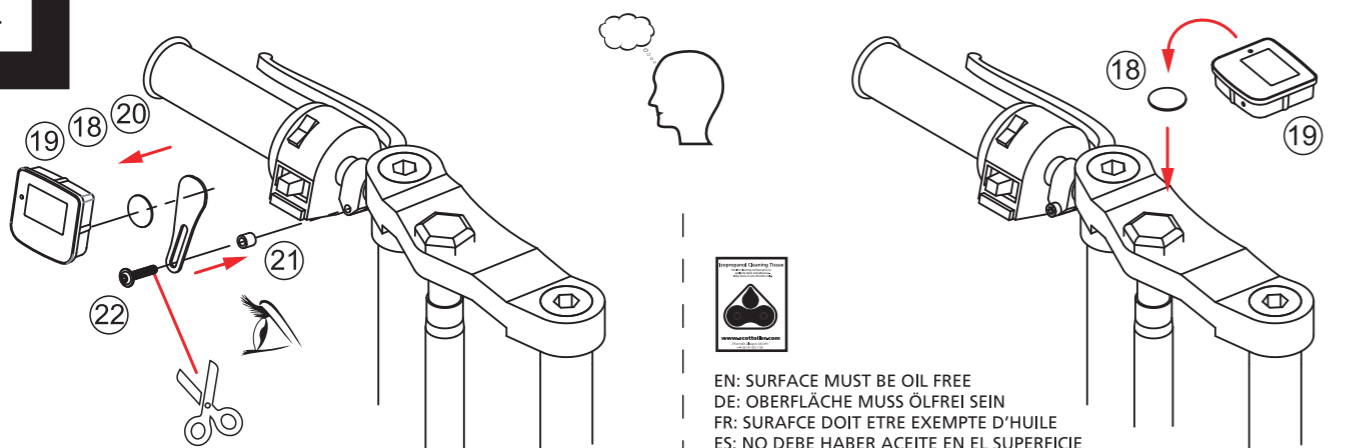

EN: SURFACE MUST BE OIL FREE
 DE: OBERFLÄCHE MUSS ÖLFREI SEIN
 FR: SURFACE DOIT ÊTRE EXEMPTÉ D'HUILE
 ES: NO DEBE HABER ACEITE EN EL SUPERFICIE
 IT: SUPERFICIE DEVE ESSERE ESENTE DA OLIO
 NL: HET OPPERVLAKTE MOET OLIEVRIJ ZIJN

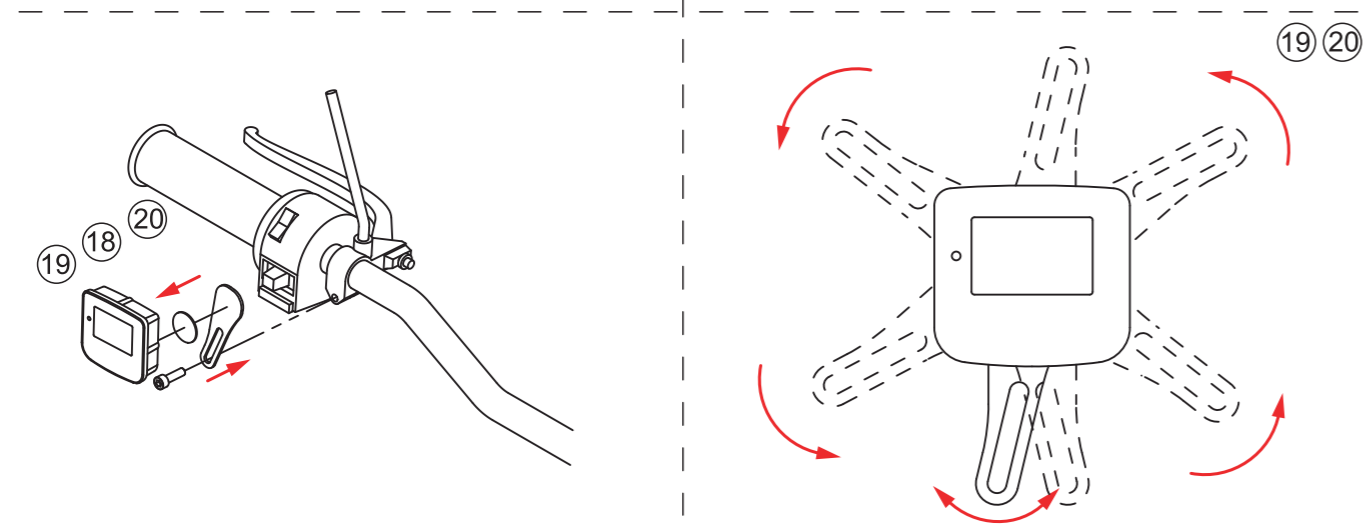

Tools Required

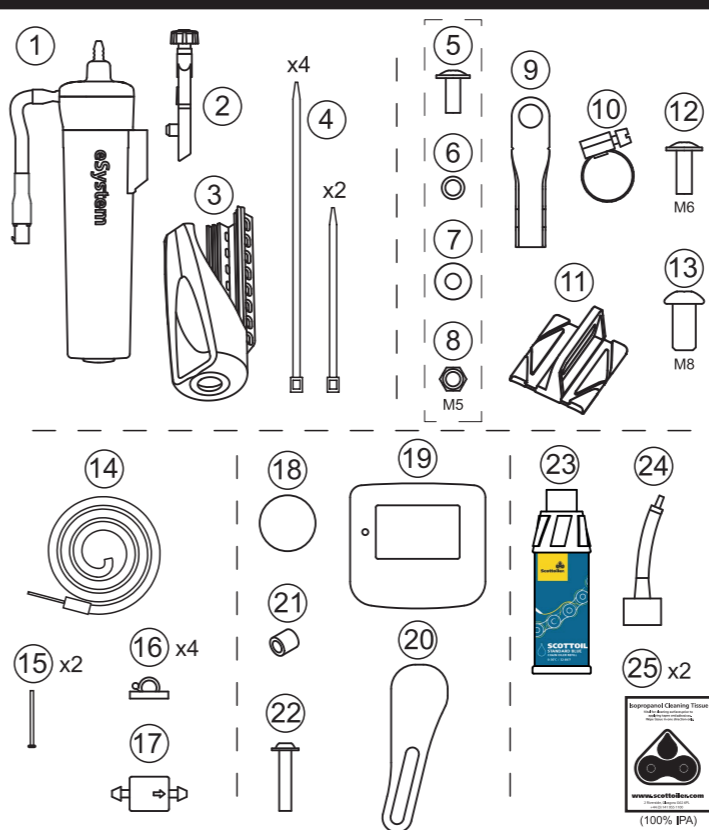

Scott's Emulsion

eSystem
motorcycle chain oiler

www.scottoiler.com

[SCOTTOILER](https://www.facebook.com/SCOTTOILER)

register your product
www.scottoiler.com/warranty

installation videos
www.scottoiler.com/esystem/videos

installation guides
www.scottoiler.com/mybike

tips
www.scottoiler.com/tips