



Additional instructions for Kit 11



all information from right and left are always given in the direction of travel

For models suitable for this kit, proceed as follows to attach the front AXfix in the direction of travel:

1. Ensure that the vehicle is stable. 2. Remove the original axle bolt on the front axle (Image 1).
3. Replace this with the hollow screw included in the kit (Figure 2)
4. Tighten the banjo bolt according to the motorcycle manufacturer's recommendations.
5. Remove the original axle nut on the rear axle (Figure 3)
6. Replace this with the axle nut with hole included in the kit (Figure 4)
7. Tighten the axle nut according to the motorcycle manufacturer's recommendation.



- Use a torque wrench and the specified torque or have the screw replaced in a specialist workshop!

You only need to perform steps 1-7 once. The hollow bolt and nut can remain permanently on the vehicle. 8. Push the AXfix through the

front hollow axle. Then, place the single cone with the handle on the

Screw the opposite side tightly by hand.

9. Push the AXfix through the rear hollow axle. Then place the single cone with handle on the


Screw the opposite side tightly by hand




- Do not use any tools! - Make sure the cones are centered!



front left

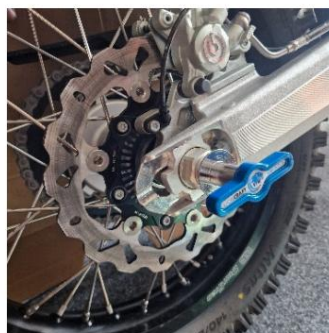

rear right

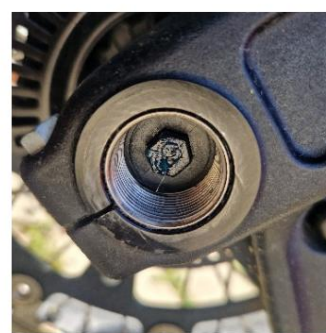

plastic plugs

If there is a plastic plug in the front of the axle (see picture), this can be easily removed.