Tenere 700 - (2019 >)



Product Compatibility

- vSystem
- xSystem
- eSystem
- REP Connect (2019 - 2024) + Hex ezCAN Yari/Denali CANSmart
- Traveller Expansion Bag
- Scorpion Dual Injector

- Magnum HCR
- REP Connect (2025 >)


We are always looking for photos of your installation to improve our guides, if you would like to share the setup on your bike please send your installation pics to technical@scottoiler.com.


1. Go to vSystem Installation
2. Go to xSystem Installation
3. Go to eSystem Installation


vSystem Installation

Step 1 - Find a vacuum source

Locate the vacuum – There is a rubber cap over a spigot on the throttle body. Remove one of these caps and then press the Damper Elbow onto the spigot. For further information see our easy step installation guide - Vacuum Connections General.

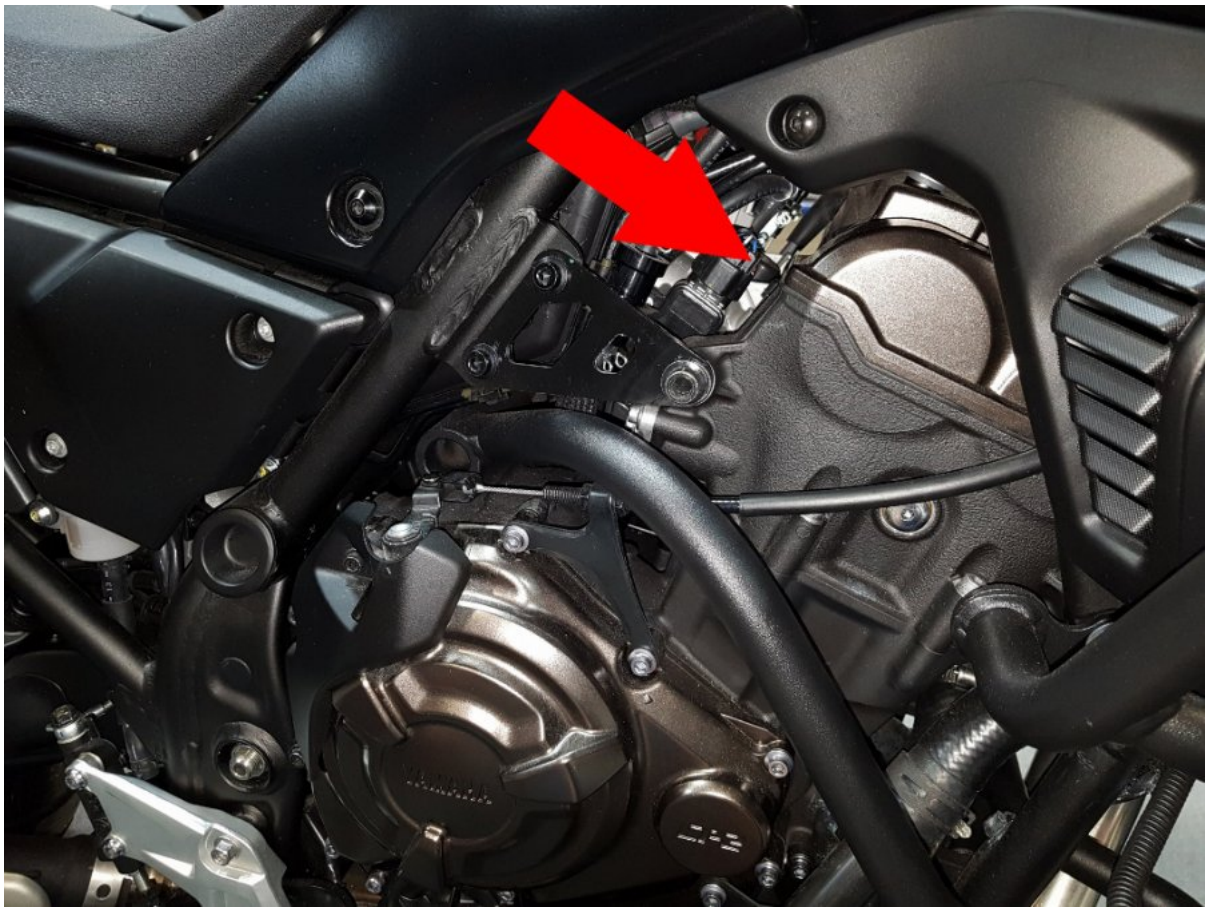

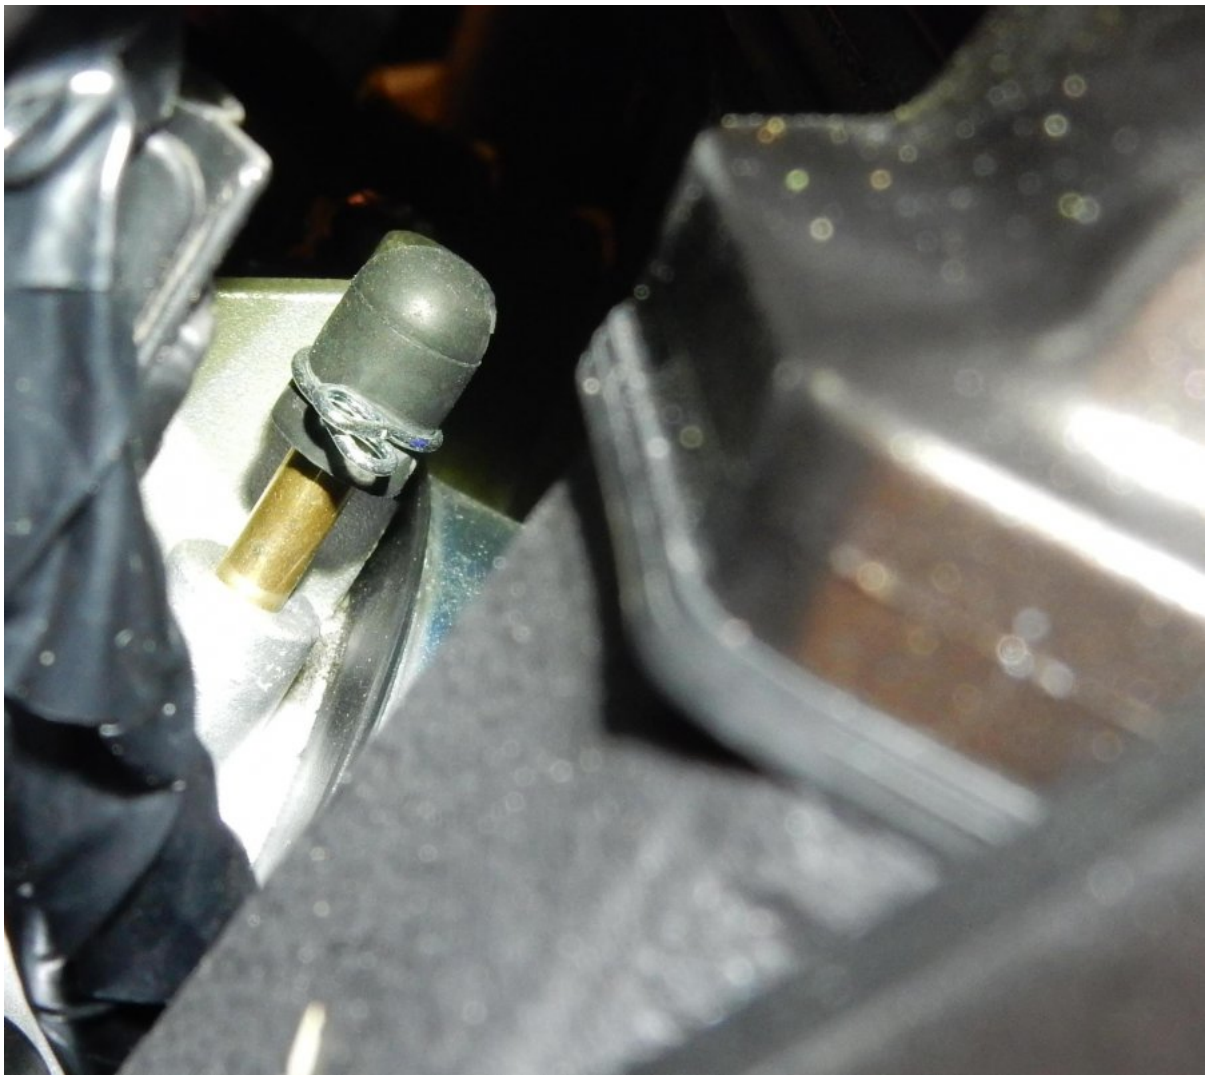


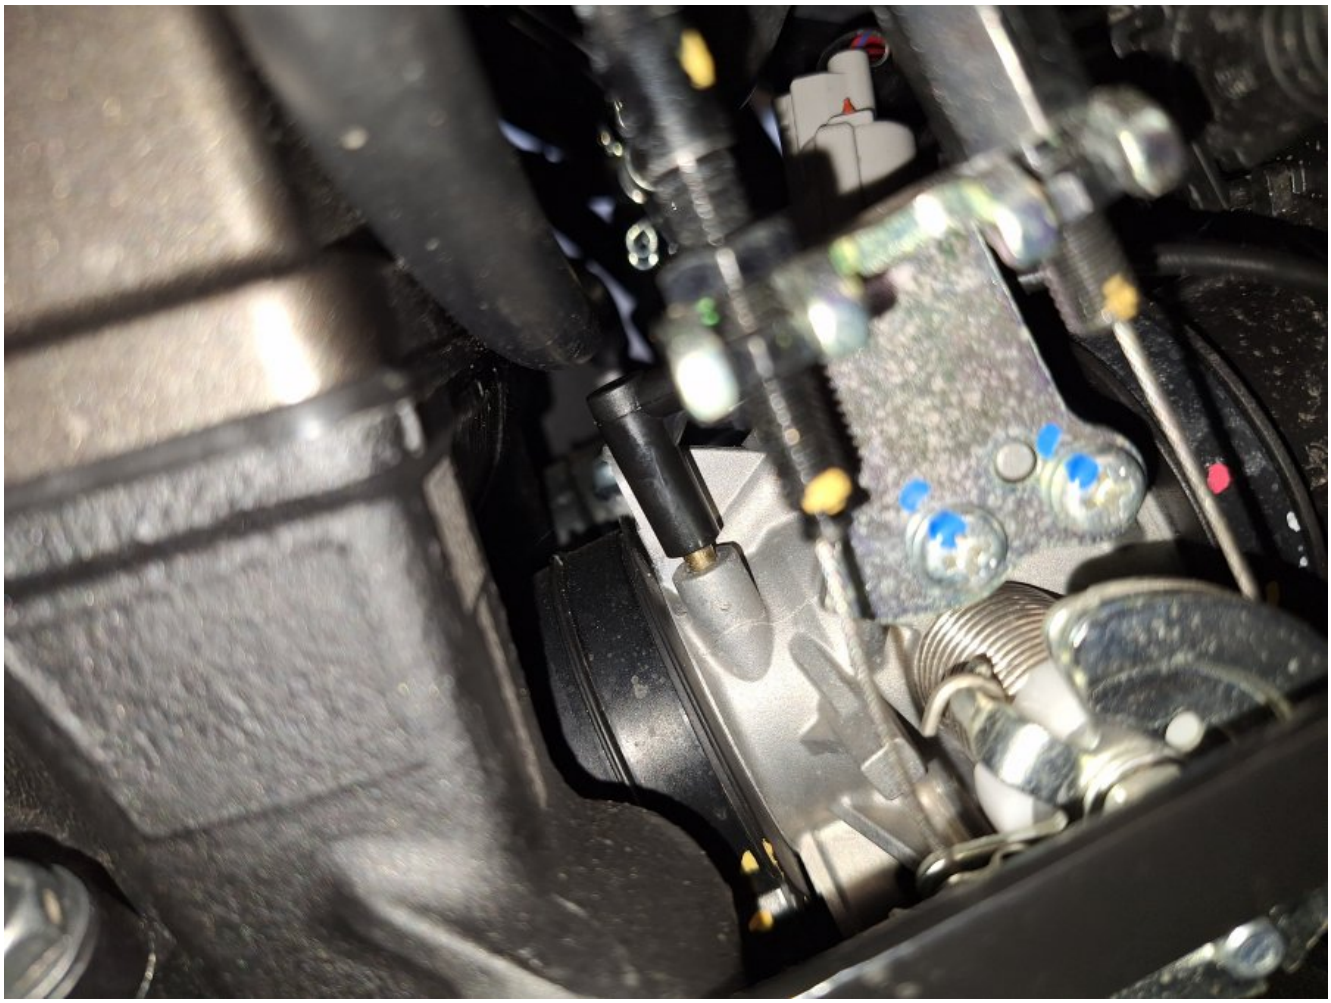


Step 2 - Find a place for the reservoir

The reservoir can be mounted to the frame. The more vertical the reservoir is mounted the better. Avoid positioning the reservoir completely horizontally, as

this will limit the available range. Remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Reservoir Positions.

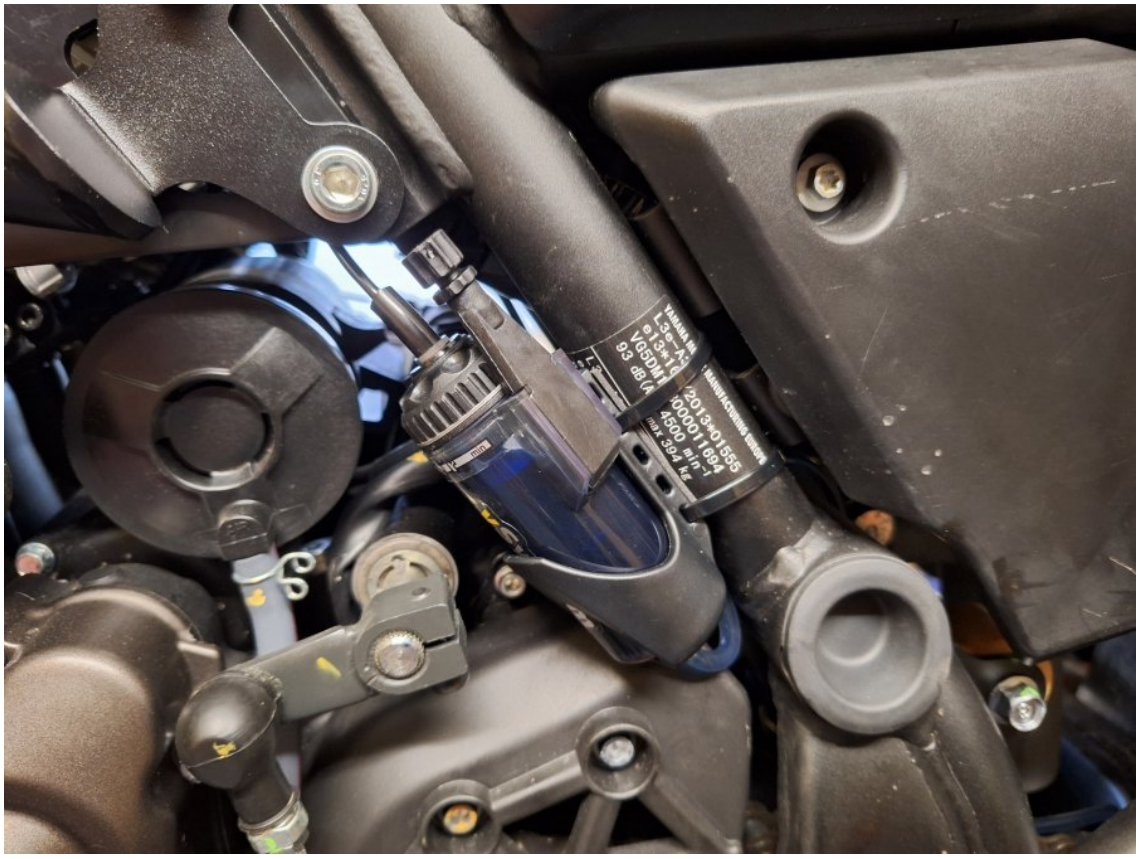

Micro RMV shown.

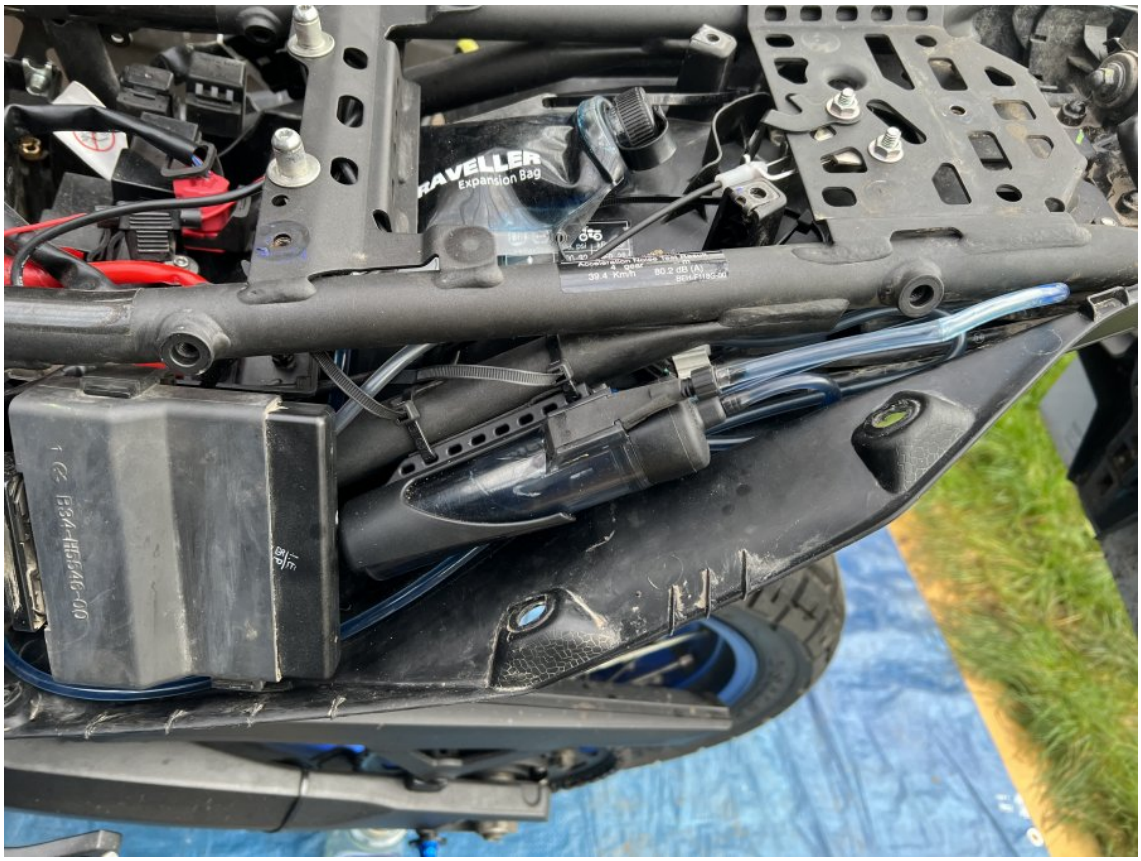

Step 3 - Mount the dispenser and connect the system


The multiform dispenser block can be manipulated and cut to fit most swing arms. Assemble the dispenser unit as per instructions. Identify the exact location before taking of the adhesive. Match up the adjustment of your chain with the adjustment of the multiform block to allow for forward/backward adjustment in line with your chain variance.

Before taking off the adhesive thoroughly clean the area and then wipe it down with the included IPA Alcohol Wipes to remove any residue.


Alternatively you can use the micro dispenser plate by itself on any other mounting point on your rear swing arm / sprocket location such as bobbin mounts or toe guards.

The delivery tubing can be routed along the swing arm using self- adhesive cable clips. For further information see our easy step installation guide - Dispenser Positioning.



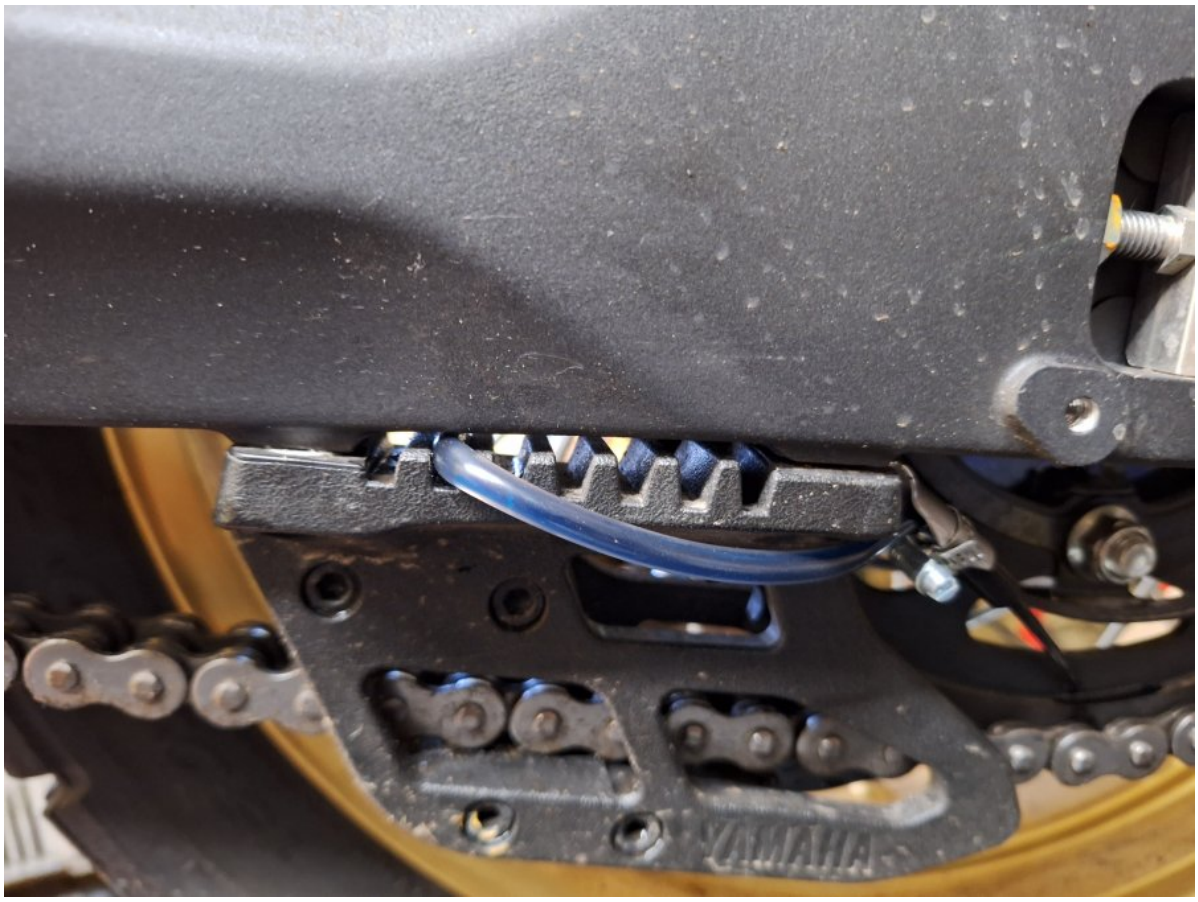

Single Injector fitted using the mounting bolt for the Rally Pack lower chain guard.

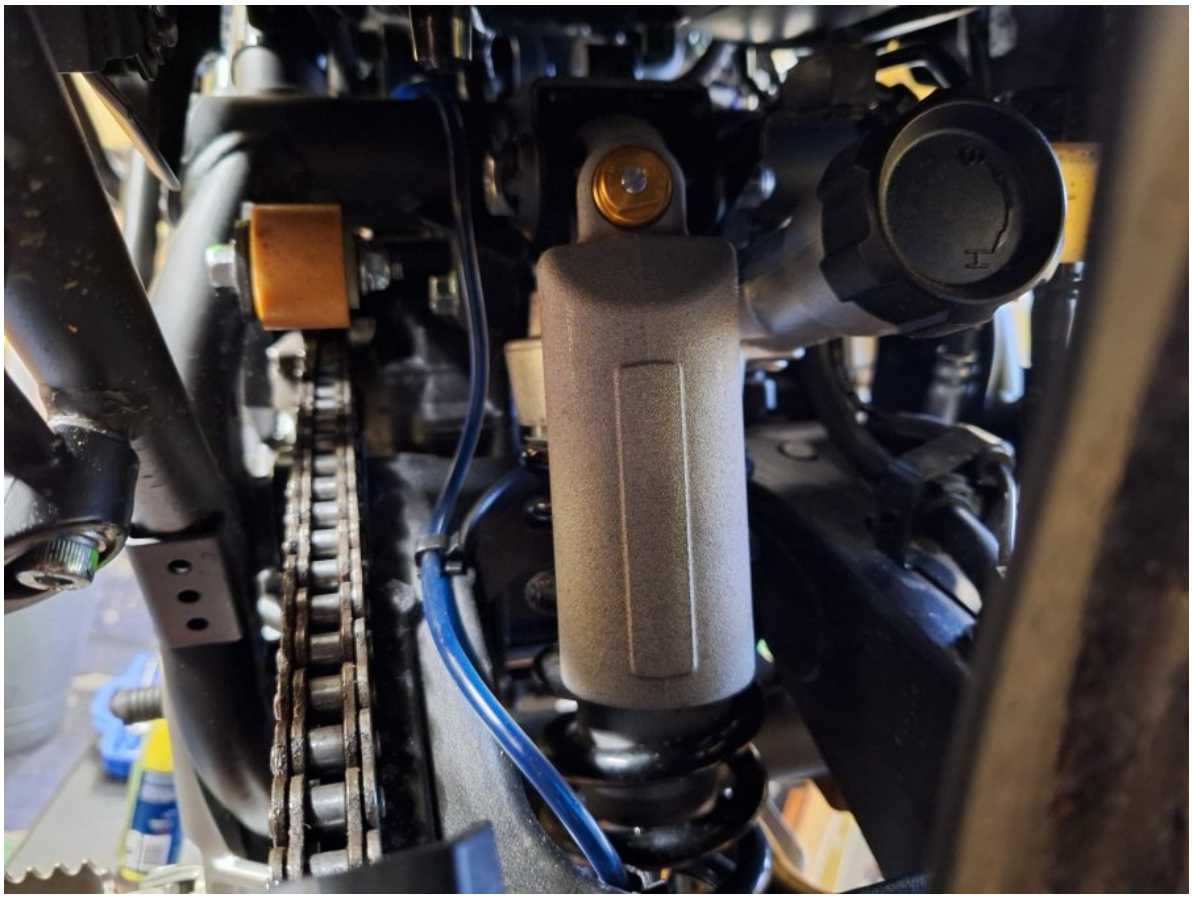

Delivery tubing can be routed through or under the swingarm

Scorpion Dual Injector shown



Traveller Expansion Bag fitted under the rear seat


○BEH1-060
●A
TRAVELLER
Expansion Bag
Pa, psi
250, 36
250, 36
MBK INDUSTRIE
Stationary Noise Test Result
93 dB (A)
Acceleration Noise Test Result
4 gear
39.4 Km/h
80.2 dB (A)

Step 4 - Fill, prime and set up your vSystem


Once fitted, fill and prime the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoiler using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoiler to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

---

xSystem Installation



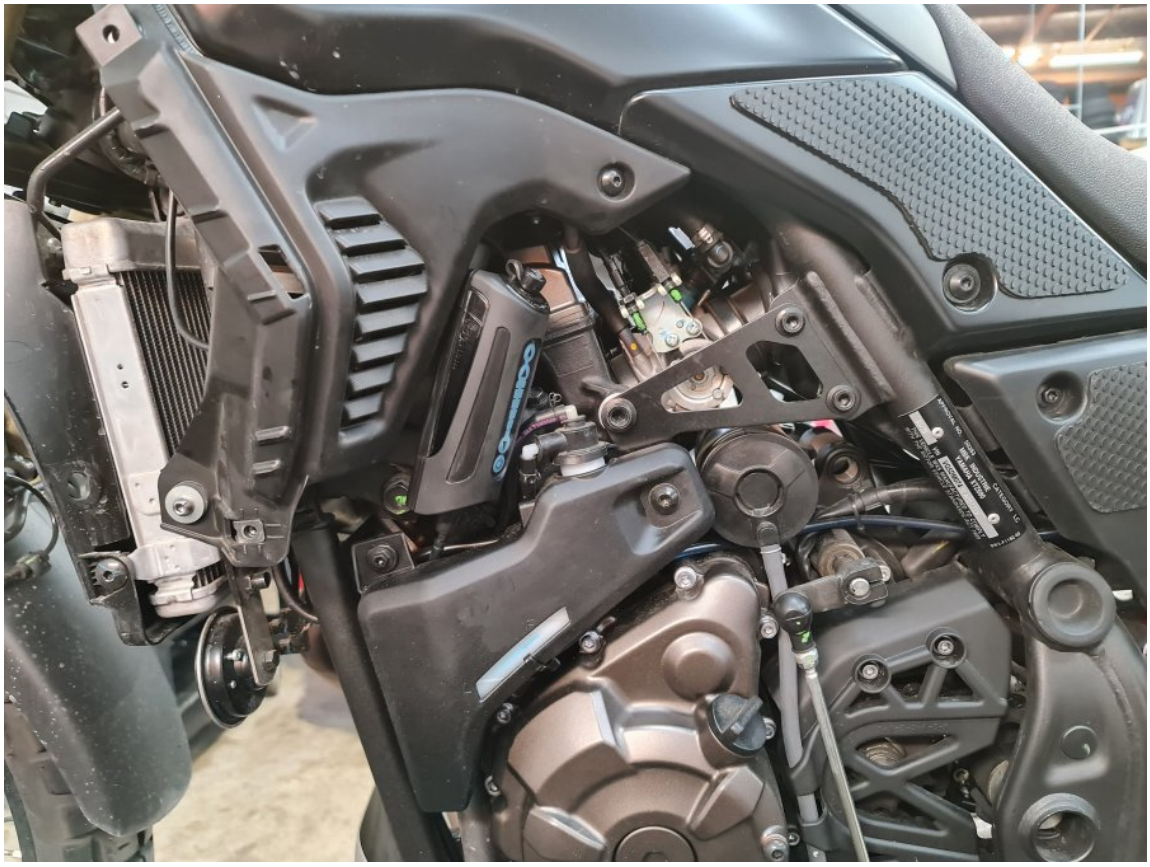

eSystem Installation


Step 1 - Mount the display

The Display Bracket (Part 5) can be rotated through 360° to give 4 mounting options and can also be flipped to provide 4 further options. The bracket can be secured to any M5/M6 bolt e.g. brake or clutch lever, brake cylinder or fairing mountings, in some cases you might need to trim the supplied bolt. It is possible to bend the bracket to shape, do so before fitting the Display Unit, part 1, to prevent damage to the unit. Alternatively, the sticky fasteners (Part 4) can be used to securely fasten the Display Unit to any flat surface e.g. the fork yokes.


Scottoiler

Step 2 - Find a reservoir location

The reservoir can be mounted to the frame. The more vertical the reservoir is mounted the better. Avoid positioning the reservoir completely horizontally, as this will limit the available range. Remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Reservoir Positions.

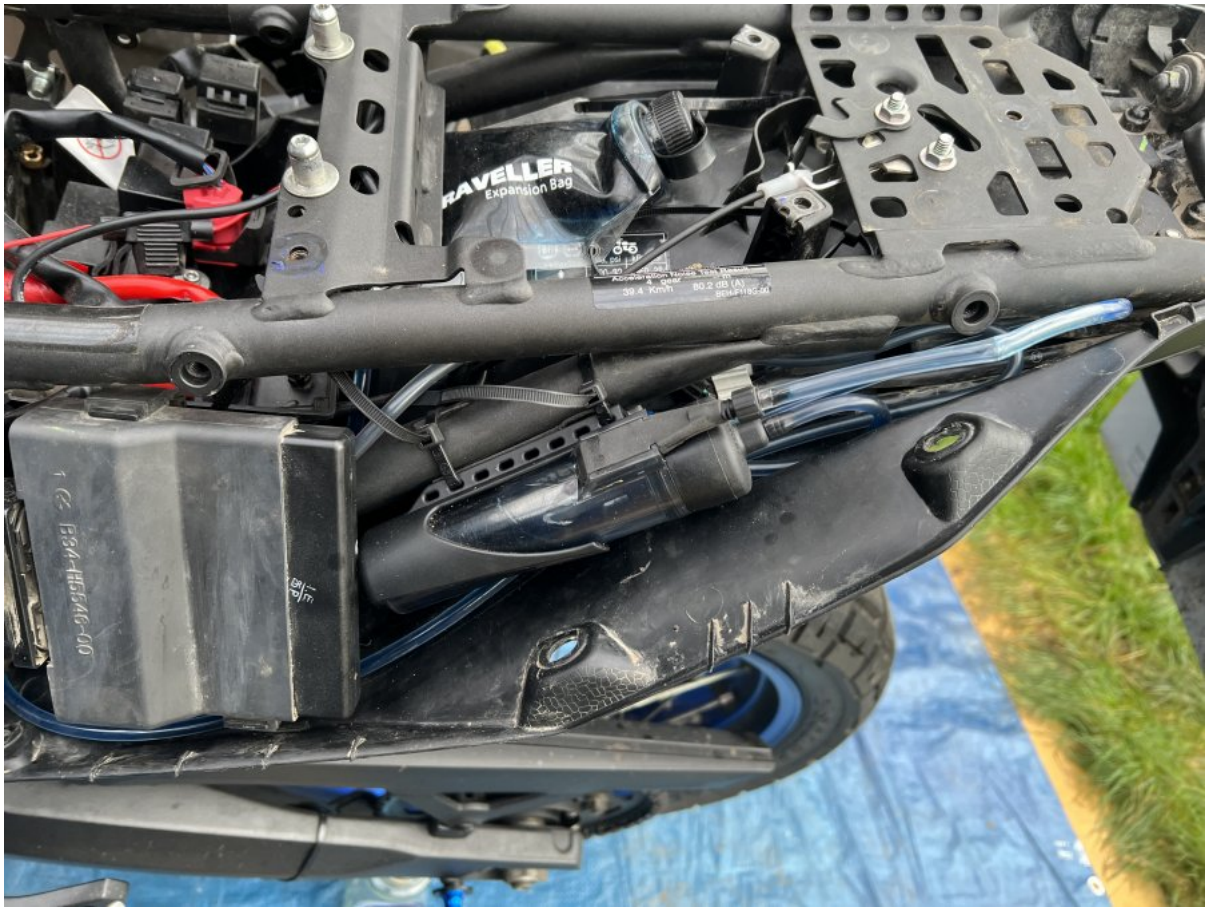

Step 3 - Mount the dispenser and connect the system

Assemble the dispenser mounting block and bolt the dispenser plate to the mounting

block. Secure the dispenser on the dispenser plate using the dispenser clip. Clean the underside of the swing arm thoroughly, and prepare the area by wiping in one direction with the alcohol wipe and then firmly press the block on - with pressure, for 5 seconds. Ensure that the tip of the Injector touches the sprocket face, with the slash cut facing outwards.





Online URL:
https://marketingengineer.de/article/tenere-700-2019-%3e-515.html