

DL 250 V-Strom (2017 - 2020)



Product Compatibility

- vSystem
- xSystem
- eSystem
- Traveller Expansion Bag
- Scorpion Dual Injector

We are always looking for photos of your installation to improve our guides, if you would like to share the setup on your bike please send your installation pics to technical@scottoiler.com.

- 
-
1. [Go to vSystem Installation](#)
 2. [Go to xSystem Installation](#)
 3. [Go to eSystem Installation](#)

vSystem Installation

Find a vacuum source

Below is the view from right hand side









Find a place for the reservoir



Mount the dispenser and connect the system



Always remember to trim the Multiform Bracket so there is no overhang at the

edge of the swingarm.

Route the Delivery Tubing



Fill, prime and set up your vSystem

Once fitted, fill and prime the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoiler using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoiler to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

xSystem Installation


General xSystem guide

The xSystem chain oiler is really easy to install and can be mounted on your bike in less than 1 hour. The installation consists of three simple steps:

- Find a place for the reservoir, either on the frame or under the seat
- Connect the reservoir to your battery
- Route the dispenser to your rear sprocket

For an example of the installation see our [xSystem Installation Guide](#).

If you have our System installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.

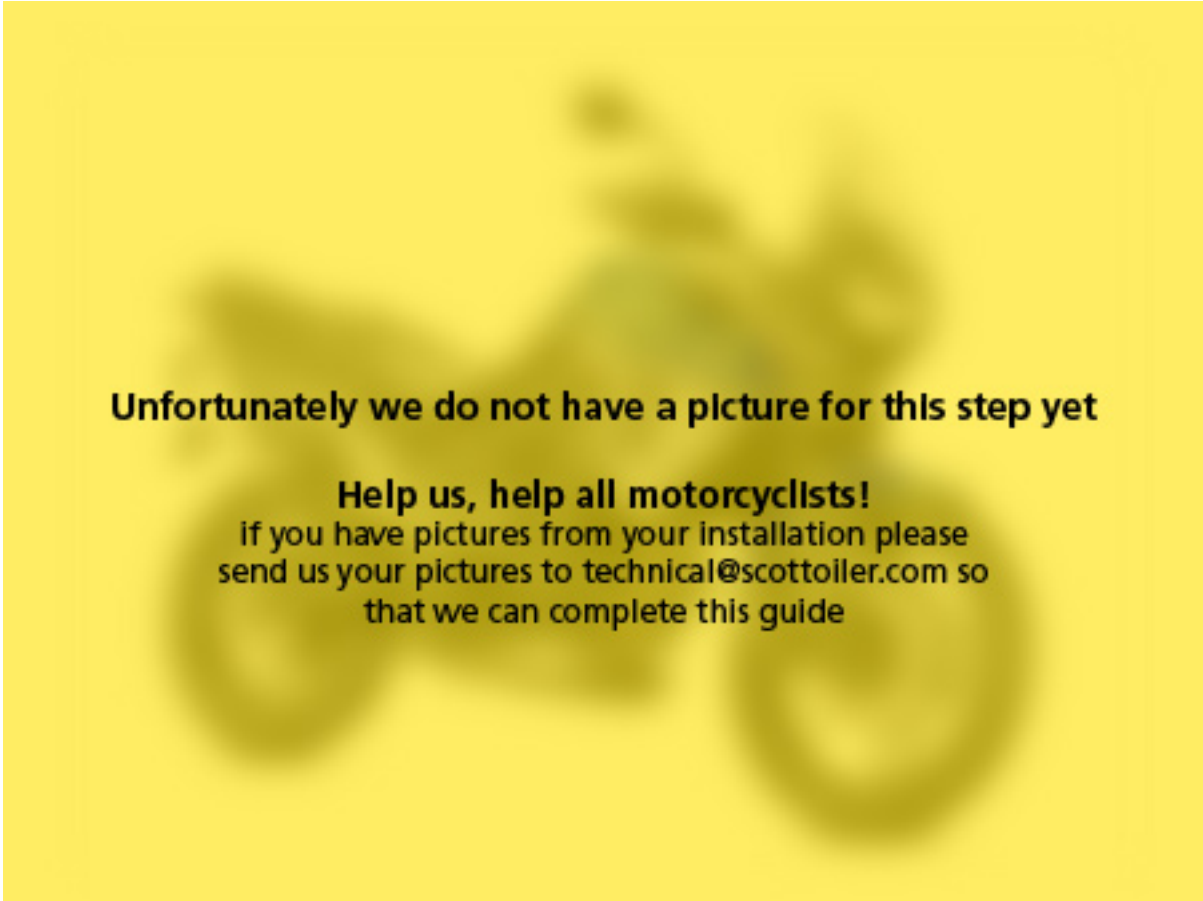

Unfortunately we do not have a picture for this step yet

Help us, help all motorcyclists!
if you have pictures from your installation please
send us your pictures to technical@scottoiler.com so
that we can complete this guide

eSystem Installation


General eSystem guide

The eSystem chain oiler is really easy to install and can be mounted on your bike in less than 1 hour. The installation consists of the three simple steps:

- Mount the display on your handlebars
- Connect the display and reservoir to your battery
- Attach the dispenser and route the delivery tubing to the reservoir

For an example of the installation see our [eSystem Installation guide](#).

If you have our system installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the Installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.

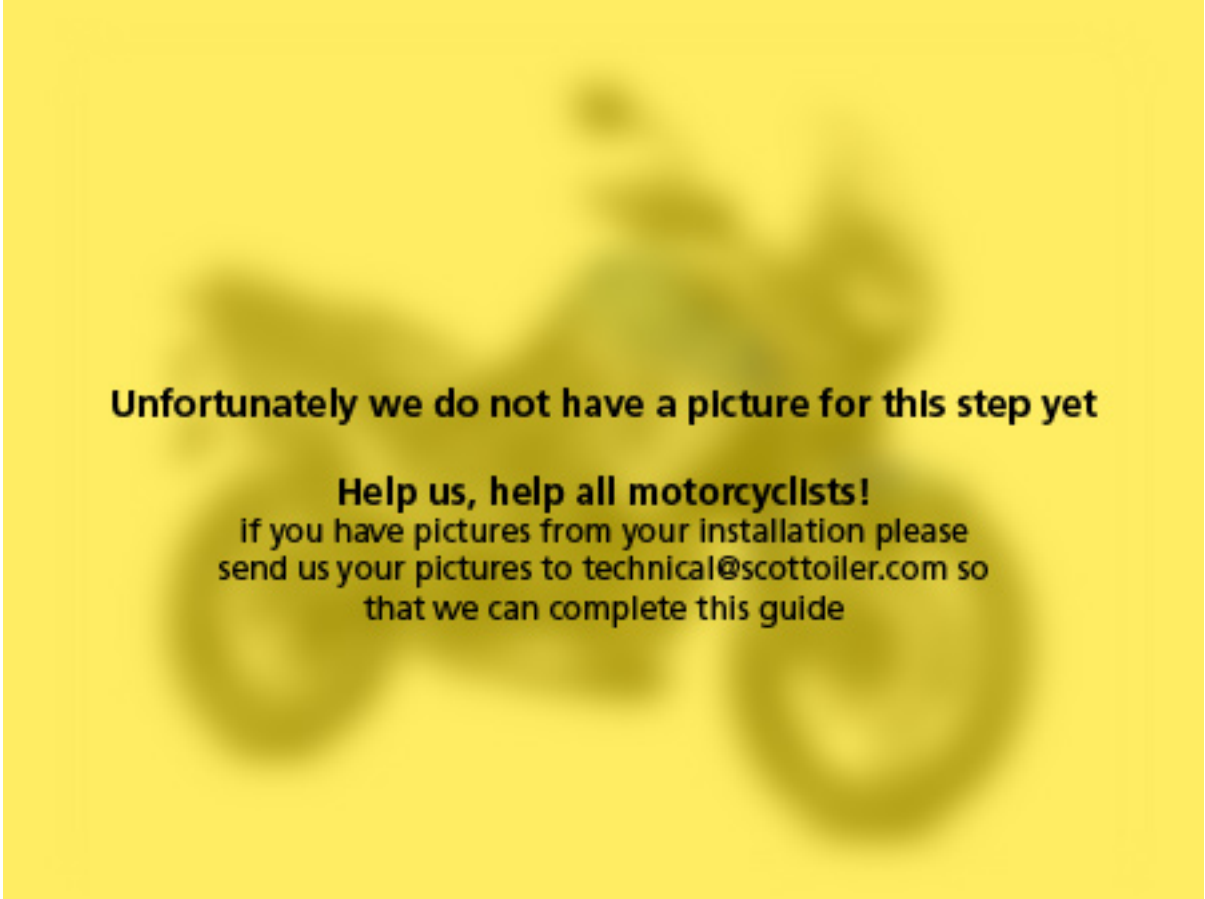

Unfortunately we do not have a picture for this step yet

Help us, help all motorcyclists!

if you have pictures from your installation please
send us your pictures to technical@scottoiler.com so
that we can complete this guide

Online URL:

<https://marketingengineer.de/article/dl-250-v-strom-2017-2020-620.html>