Brutale 675, 800 & 1000 (2012 >)



Product Compatibility

- vSystem
- xSystem
- eSystem
- Traveller Expansion Bag

- Magnum HCR
- Scorpion Dual injector

We are always looking for photos of your installation to improve our guides, if you would like to share the setup on your bike please send your installation pics to technical@scottoiler.com.

---

1. Go to vSystem Installation
2. Go to xSystem Installation
3. Go to eSystem Installation

---

vSystem Installation

2012 - 2016

Step 1 - Find a vacuum source

Locate the vacuum – There is a rubber cap over a spigot on the throttle body. Remove one of these caps and then press the Damper Elbow onto the spigot. For further information see our easy step installation guide - Vacuum

Connections General.





2016 onwards

2016 onwards EVAP models

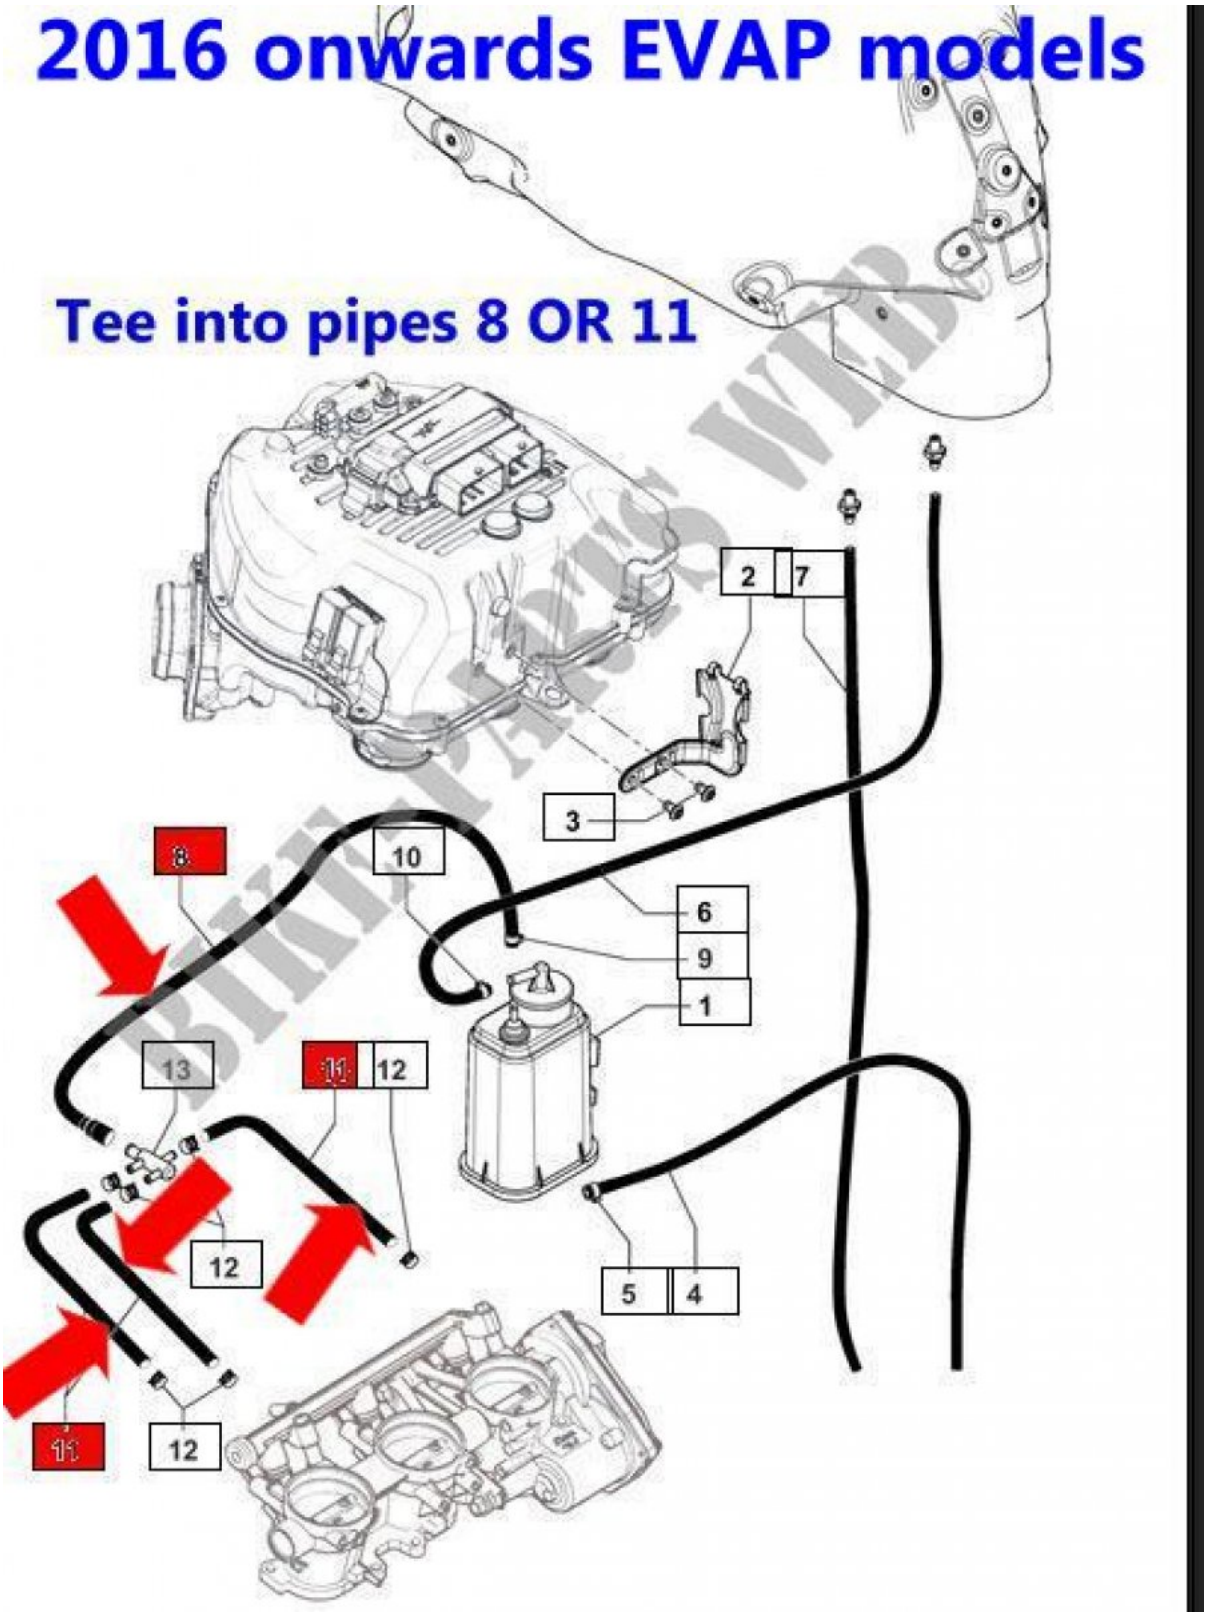

Step 2 - Find a place for the reservoir

The reservoir can be mounted on the frame or under the seat. The more vertical the reservoir is mounted the better. Avoid positioning the reservoir completely horizontally, as this will limit the available range. Remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Reservoir Positions.

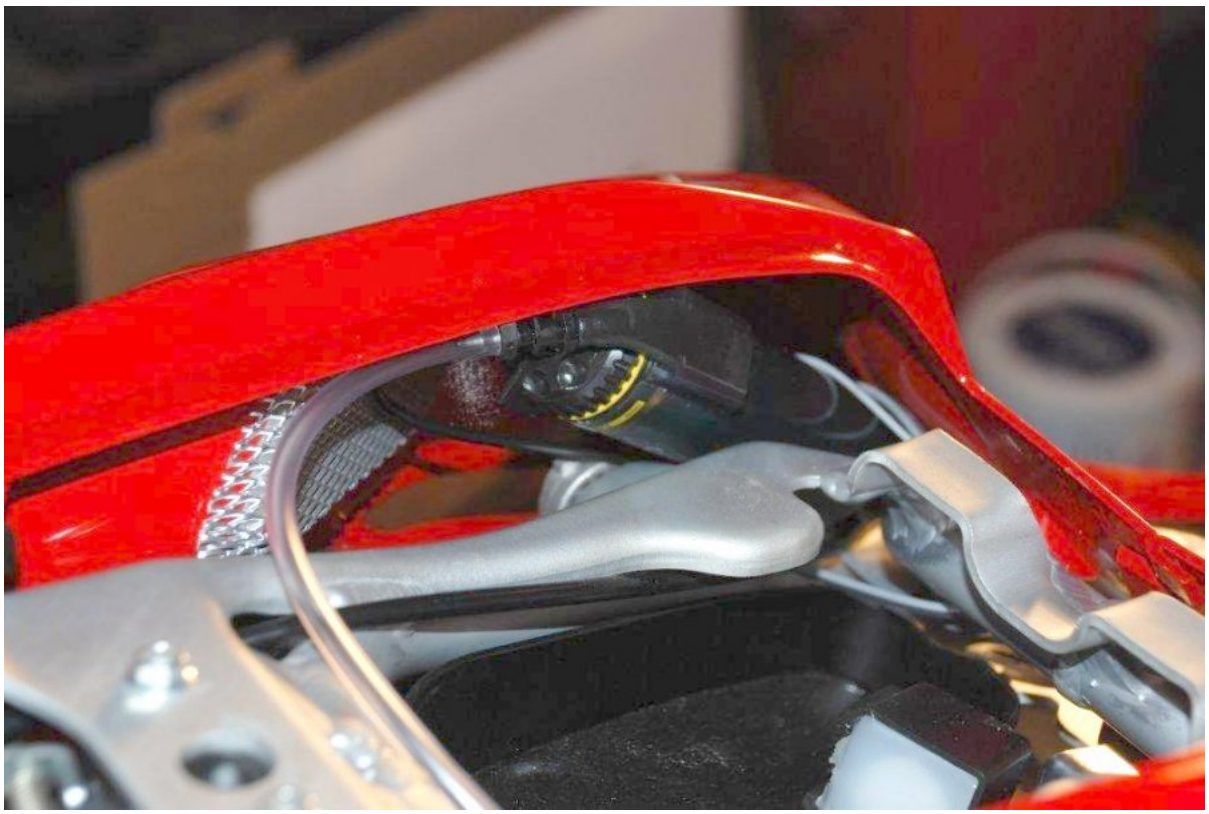

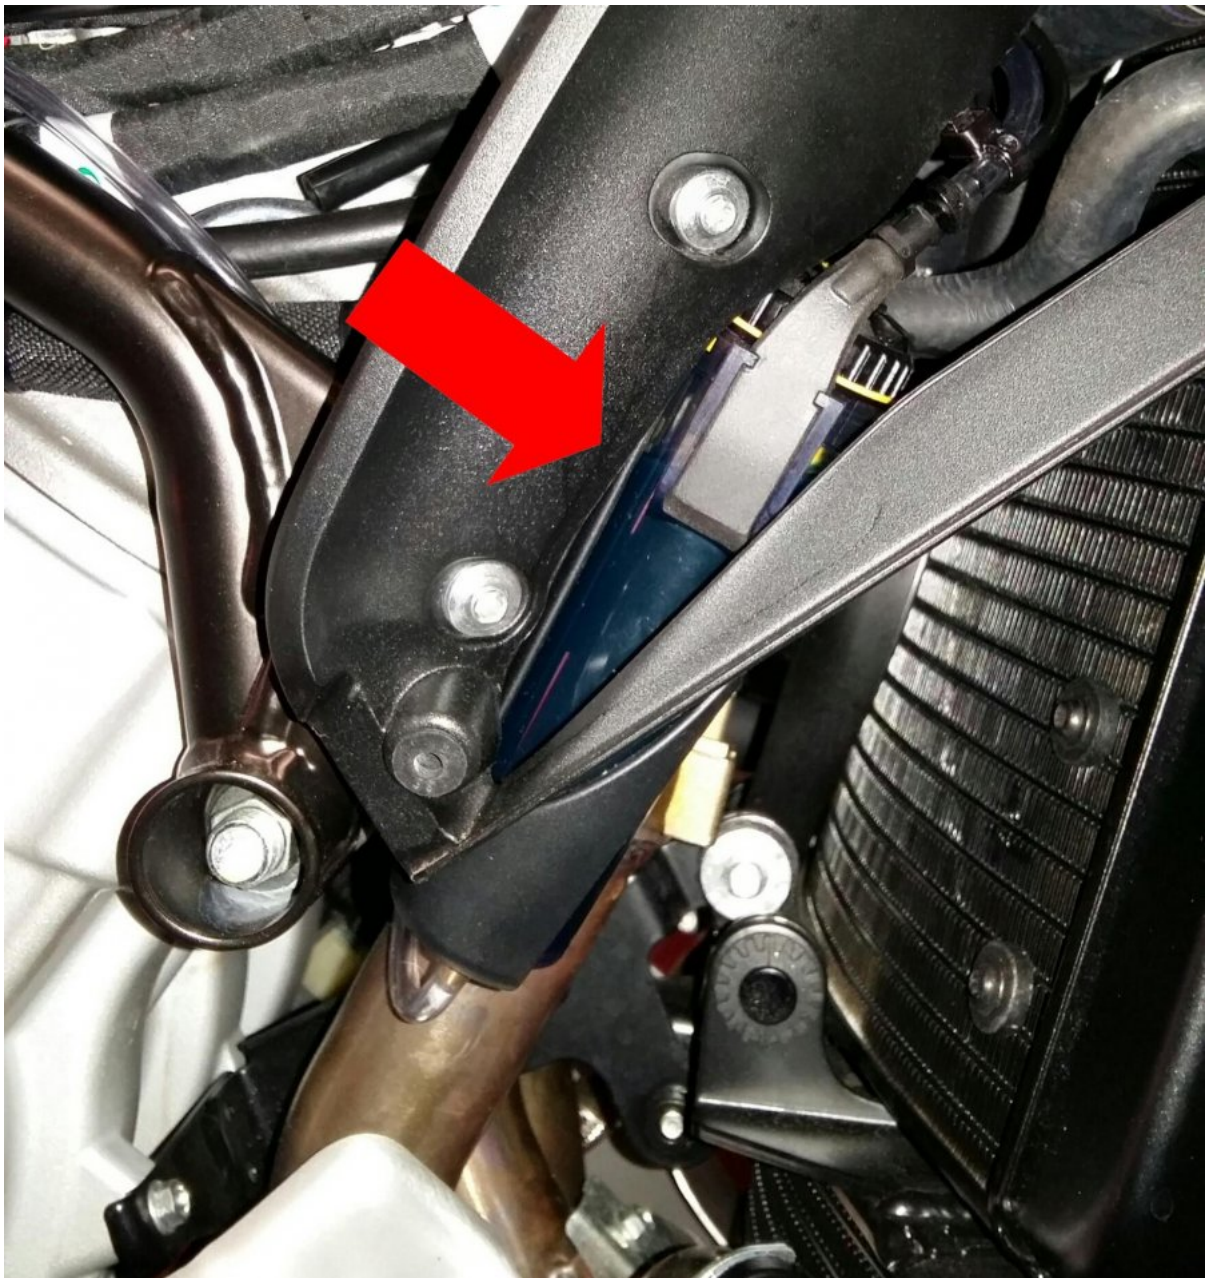

Step 3 - Mount the dispenser and connect the system

The dispenser is held using the dispenser plate and clip, secure by the slipper strip bolt. The Injector must lightly touch the outside face of the sprocket, with the slash cut facing outwards. Use self adhesive clips to route the

delivery tubing along the swing arm and up to the reservoir, avoiding the chain and any hot engine or exhaust components.

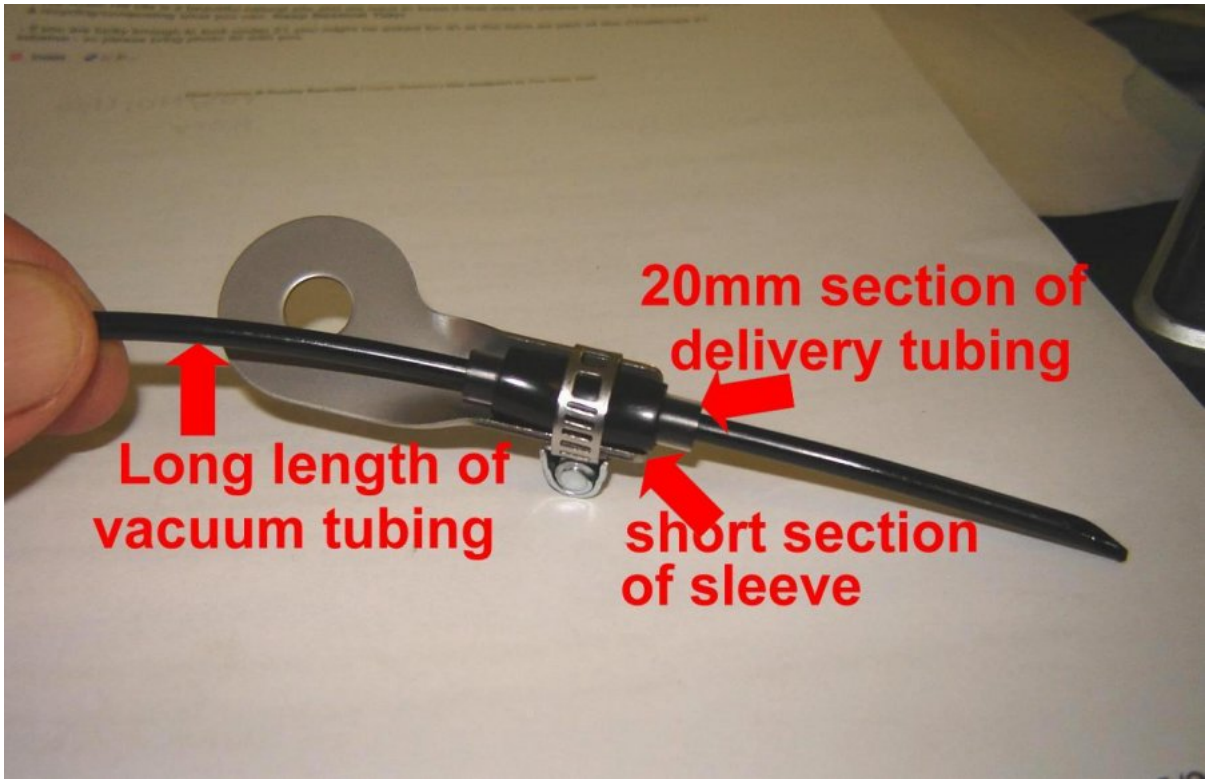

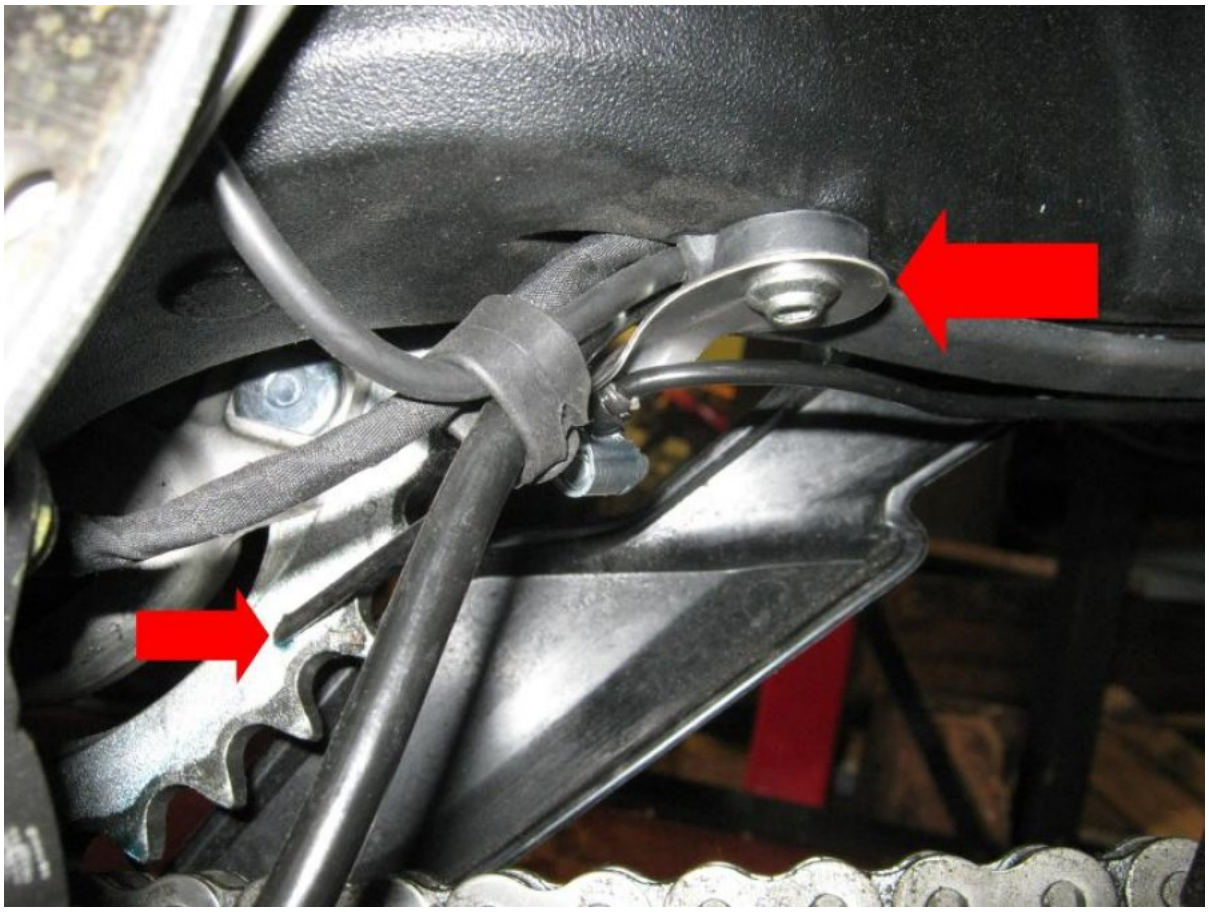



Step 4 - Fill, prime and set up your vSystem

Once fitted, fill and prime the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoiler using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this

allows the oil from the Scottoiler to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

---

xSystem Installation

General xSystem guide

The xSystem chain oiler is really easy to install and can be mounted on your bike is less than 1 hour. The installation consists of three simple steps:

- Find a place for the reservoir, either on the frame or under the seat
- Connect the reservoir to your battery
- Route the dispenser to your rear sprocket

For an example of the installation see our xSystem Installation Video .

If you have our System installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.

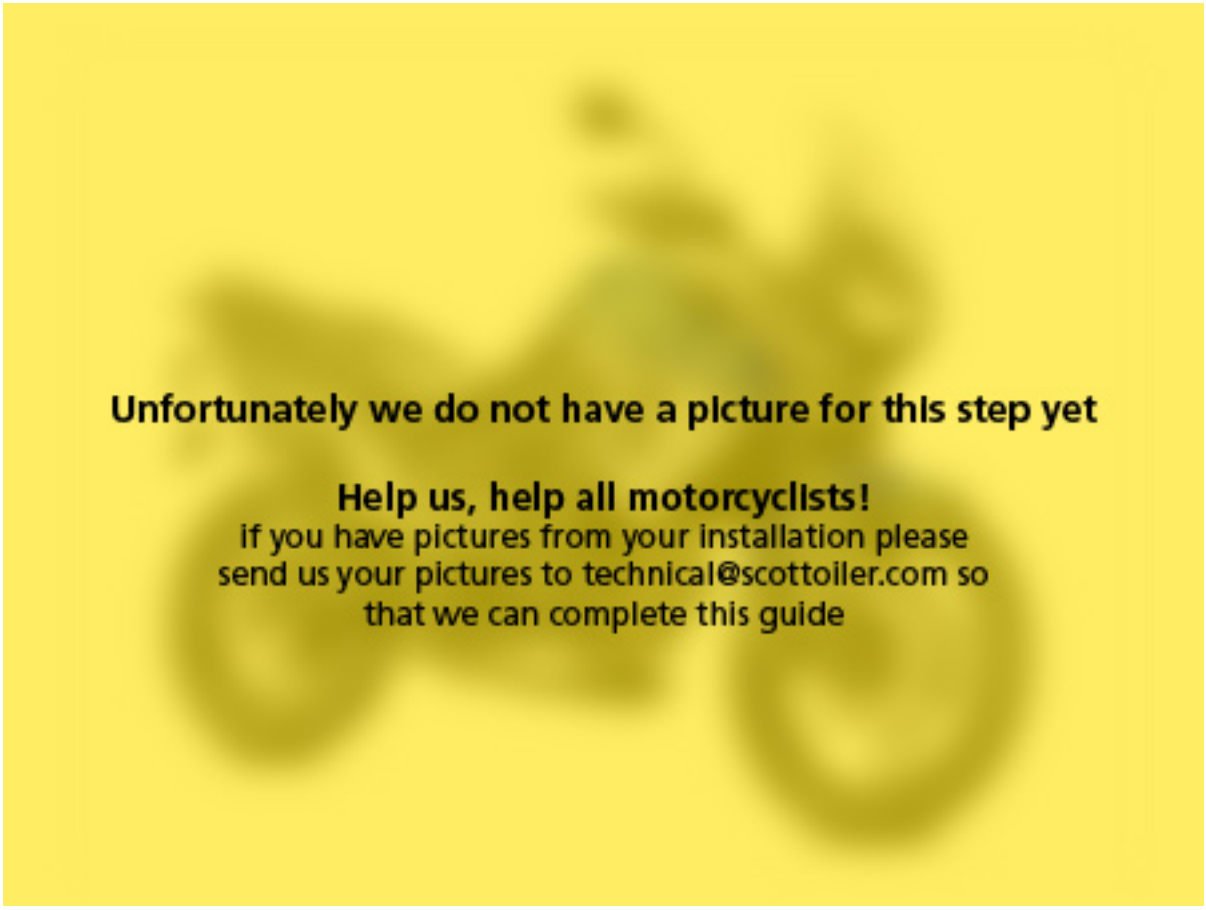

eSystem Installation

General eSystem guide

The eSystem chain oiler is really easy to install and can be mounted on your bike in less than 1 hour. The installation consists of the three simple steps:

- Mount the display on your handlebars
- Connect the display and reservoir to your battery
- Attach the dispenser and route the delivery tubing to the reservoir

For an example of the installation see our eSystem v3.1 Fitting Instructions.

If you have our system installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the Installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.


Scottoiler
1401
60
20
menu
set

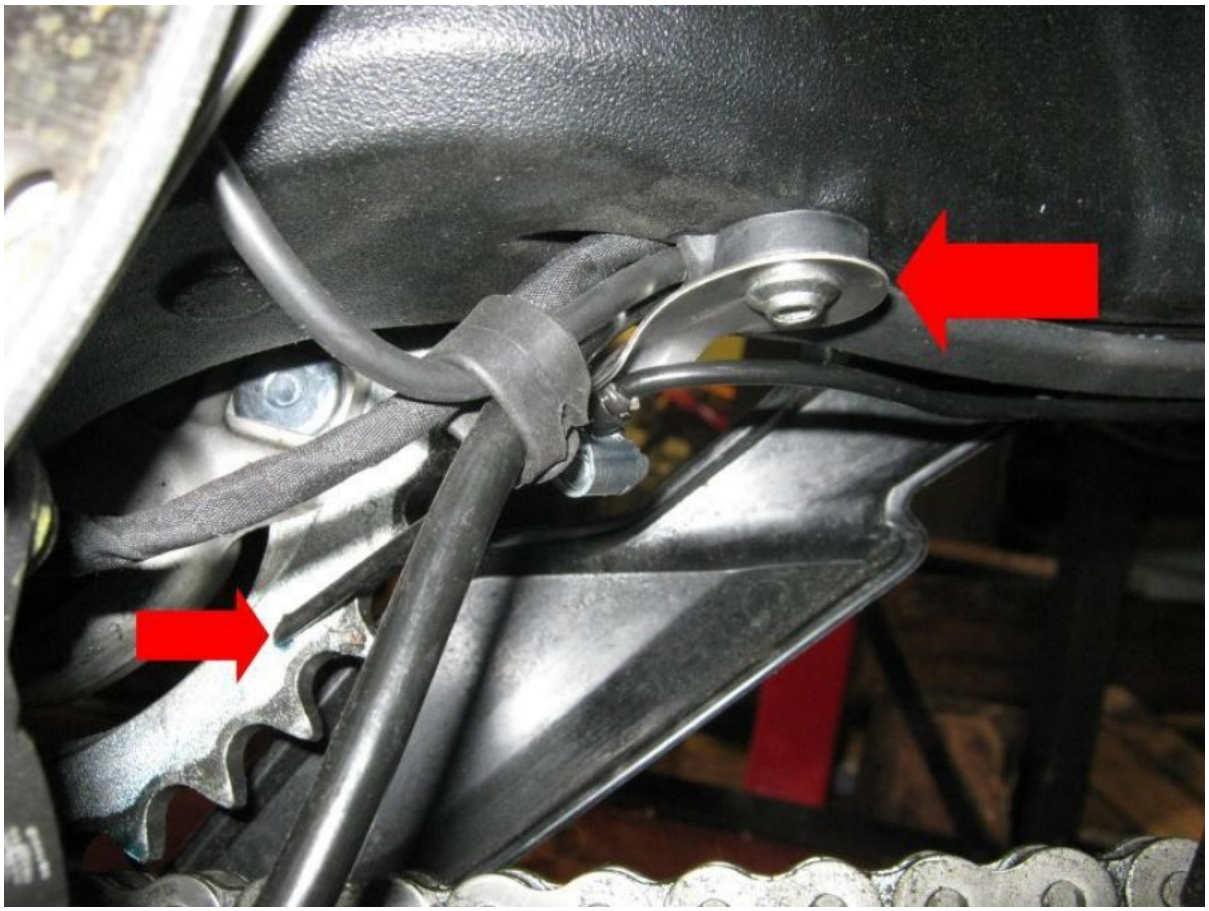

Online URL:
https://marketingengineer.de/article/brutale-675-800-1000-2012-%3e-531.html