CB500X & F (2016 - 2021)



Product Compatibility

- vSystem
- xSystem
- eSystem
- Traveller Expansion Bag
- Scorpion Dual injector

- Magnum HCR

vSystem Installation

Step 1 - Find a vacuum source

There is a vacuum pipe from the throttle body to the EVAP purge valve. You can read more about the EVAP System and how to identify the correct vacuum pipe here. Cut this pipe and insert the 4mm Tee connector, and push the vacuum damper elbow onto the third leg of the tee.



Step 2 - Find a place for the reservoir

The reservoir can be mounted on the frame or under the seat. The more vertical the reservoir is mounted the better. Avoid positioning the reservoir completely horizontally, as this will limit the available range. Remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Reservoir Positions.


vSystem



vSystem RMV location suggestion.

Step 3 - Mount the dispenser and connect the system

Assemble the dispenser mounting block and bolt the dispenser plate to the mounting block. Secure the dispenser on the dispenser plate using the dispenser clip. Clean the underside of the swing arm thoroughly, and prepare the area by wiping in one direction with the alcohol wipe and then firmly press the block on - with pressure, for 5 seconds. Ensure that the tip of the Injector touches the sprocket face, with the slash cut facing outwards.





Step 4 - Fill, prime and set up your vSystem

Once fitted, fill and prime the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride,

and then adjust as required.

For best results clean your chain before fitting the Scottoiler using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoiler to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.



---

xSystem Installation

General xSystem guide

The xSystem chain oiler is really easy to install and can be mounted on your bike is less than 1 hour. The installation consists of three simple steps:

- Find a place for the reservoir, either on the frame or under the seat
- Connect the reservoir to your battery
- Route the dispenser to your rear sprocket

For an example of the installation see our xSystem Installation Video .

If you have our System installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.

Below are examples of reservoir positions





Route delivery tubing and position dispenser


การบำรุงรักษายาง
ความดันลมสมเหตุสมผลเมื่อเย็น
kPa
kgf/cm²
psi
เมื่อมีผู้ขี่ยนน้ำหนัก
ยางหน้า
200
2.00
29
ยางหลัง
280
2.80
41
เมื่อขับขี่ตามลำพัง
ยางหน้า
200
2.00
29
ยางหลัง
280
2.80
41
การบำรุงรักษา
ความมีการปรับตั้งใช้และหยอดน้ำมัน
ระยะฟรีของโซ่ 35 มม. หรือ 1 3/8 นิ้ว
รายละเอียดโปรดศึกษาคู่มือผู้ใช้


Scottoiler
การบำรุงรักษาโซ่
ควรมีการปรับตั้งโซ่และหยอดน้ำมันหล่อลื่น
ระยะหรือทุกโซ่ 35 กม. หรือ 1 3/8 นิ้ว
ระยะฟรี
รายละเอียดโปรดศึกษาคู่มือผู้ใช้
MKP-T80
Scottoiler
motorcycle chain oilers



eSystem Installation

Step 1 - Find a place for the display

The Display Bracket (Part 5) can be rotated through 360° to give 4 mounting options and can also be flipped to provide 4 further options. The bracket can be secured to any M5/M6 bolt e.g. brake or clutch lever, brake cylinder or fairing mountings, in some cases you might need to trim the supplied bolt. It is possible to bend the bracket to shape, do so before fitting the Display Unit, part 1, to prevent damage to the unit. Alternatively, the sticky fasteners (Part 4) can be used to securely fasten the Display Unit to any flat surface e.g. the fork yokes.


Scottoiler
menu
set



Step 2 - Find a space for the reservoir

The reservoir can be mounted on the frame or under the seat. The more vertical the reservoir is mounted the better. Avoid positioning the reservoir completely horizontally, as this will limit the available range. Remember to avoid exhaust and engine components. For further information, see our easy step installation guide – Reservoir Positions.

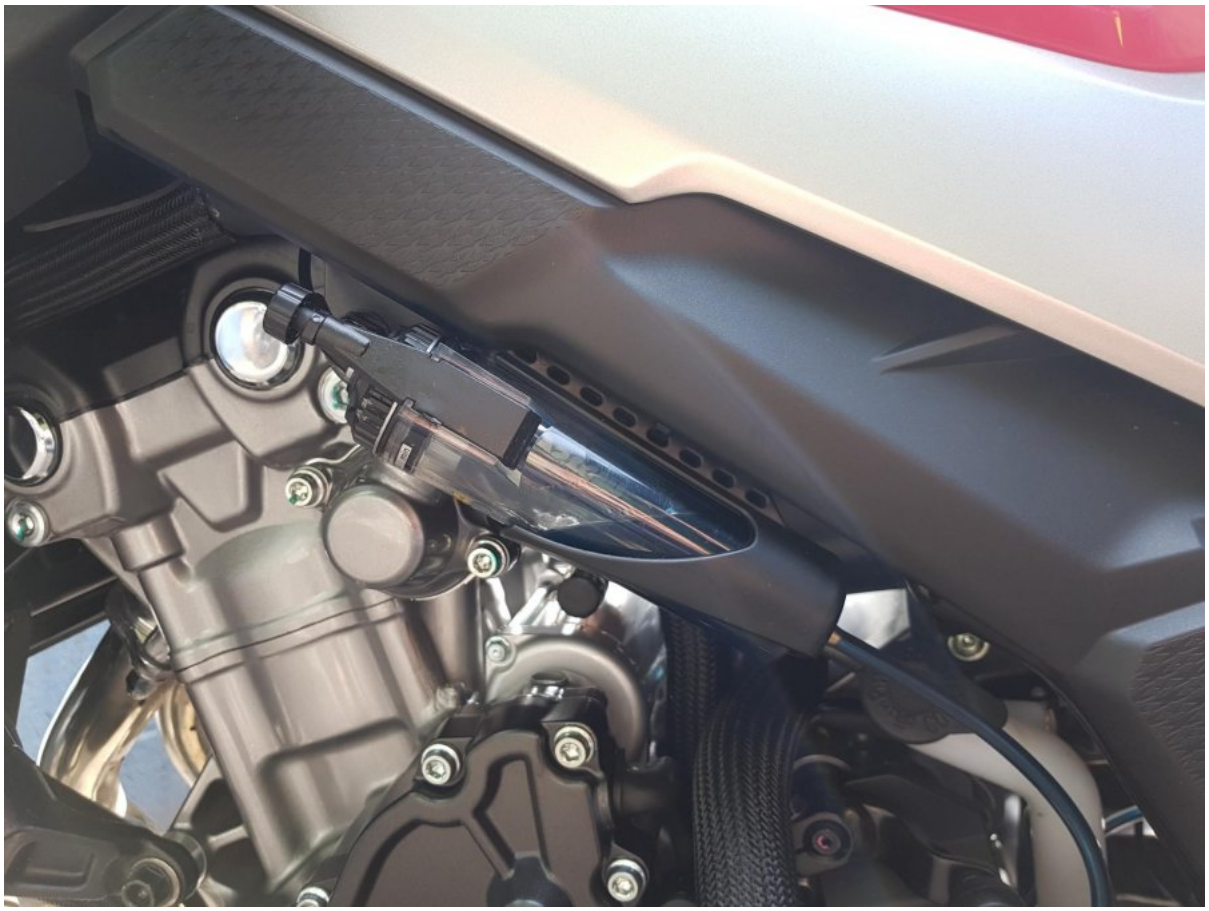

Note: vSystem reservoir shown

Step 3 - Mount dispenser on your rear sprocket

Assemble the dispenser mounting block and bolt the dispenser plate to the mounting block. Secure the dispenser on the dispenser plate using the dispenser clip. Clean the underside of the swing arm thoroughly, and prepare the area by wiping in one direction with the alcohol wipe and then firmly press the block on - with pressure, for 5 seconds. Ensure that the tip of the Injector touches the sprocket face, with the slash cut facing outwards.



Step 4 - Connect system to your battery

The eSystem must be wired directly to the battery. Attach the red wire to the +ve terminal and attach the black wire to the -ve terminal.

If you want to learn more about the eSystem Battery Connection and Power Consumption please click here.

Step 5 - Fill, prime, and set up your new eSystem

Once fitted, fill the REP and prime the pump. Attach the delivery tubing and

prime until the oil reaches the point where you want to install the check valve. Stop the priming process and cut and insert the check valve at the chosen position. Continue priming the system until oil reaches the sprocket.

For further information you can also watch our installation video that shows the setup steps. How to fill and prime my eSystem?

Set the flow rate, using the 'Driving Screen' on the Display Unit, to 60-70 seconds per drop (s/dp), check the condition of your chain after a ride, and adjust as required.

Online URL:
https://marketingengineer.de/article/cb500x-f-2016-2021-550.html