890 Adventure (2021 >)



Product Compatibility

- vSystem
- xSystem
- eSystem
- REP Connect + Hex ezCAN Gobj/ Denali CANsmart/Lonerider motoCAN
- Traveller Expansion Bag
- Scorpion Dual Injector

- Magnum HCR

We are always looking for photos of your installation to improve our guides, if you would like to share the setup on your bike please send your installation pics to technical@scottoiler.com.

---


1. Go to vSystem Installation
2. Go to xSystem Installation
3. Go to eSystem Installation

Please Note!

Scottoiler recommend this kit is installed by a trained technician.

vSystem Installation


Step 1 - Find a vacuum source

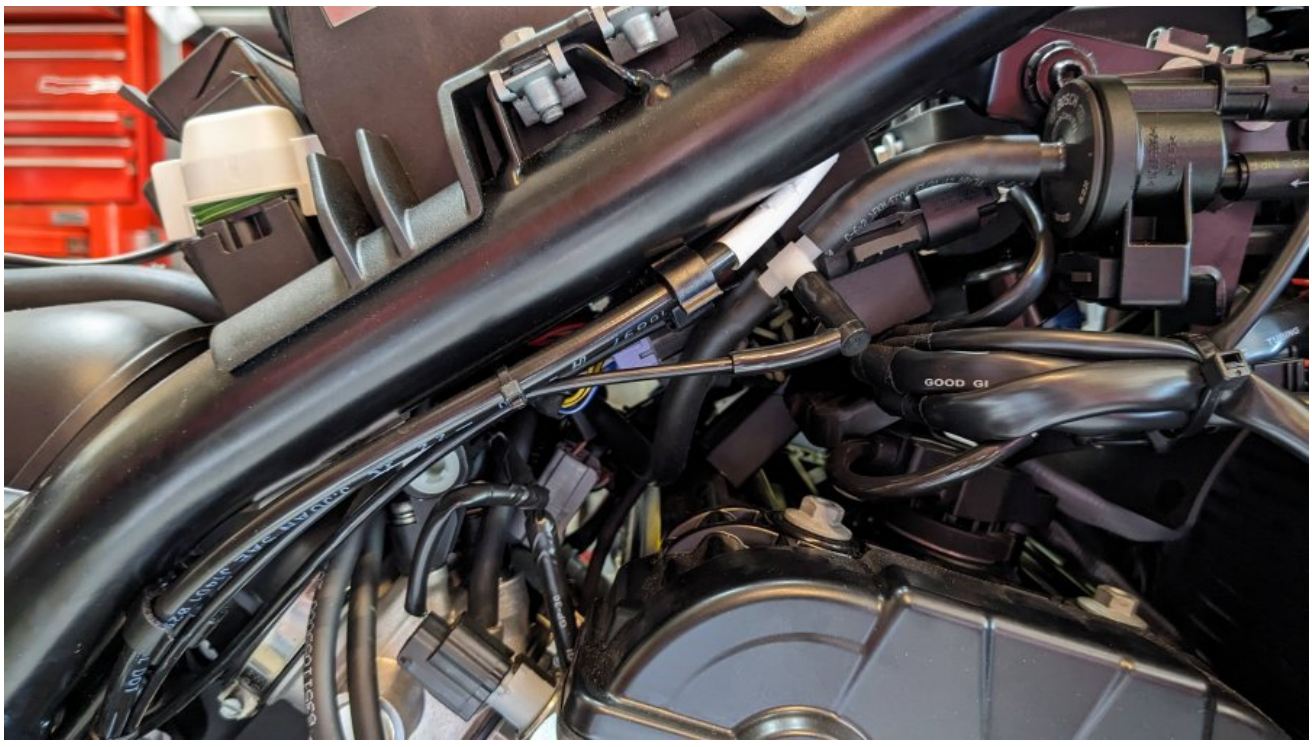

Vacuum feed located at right side under fuel tank.

Vacuum feed taken from pipe between throttle body feed + EVAP purge valve.

Step 2 - Find a place for the reservoir

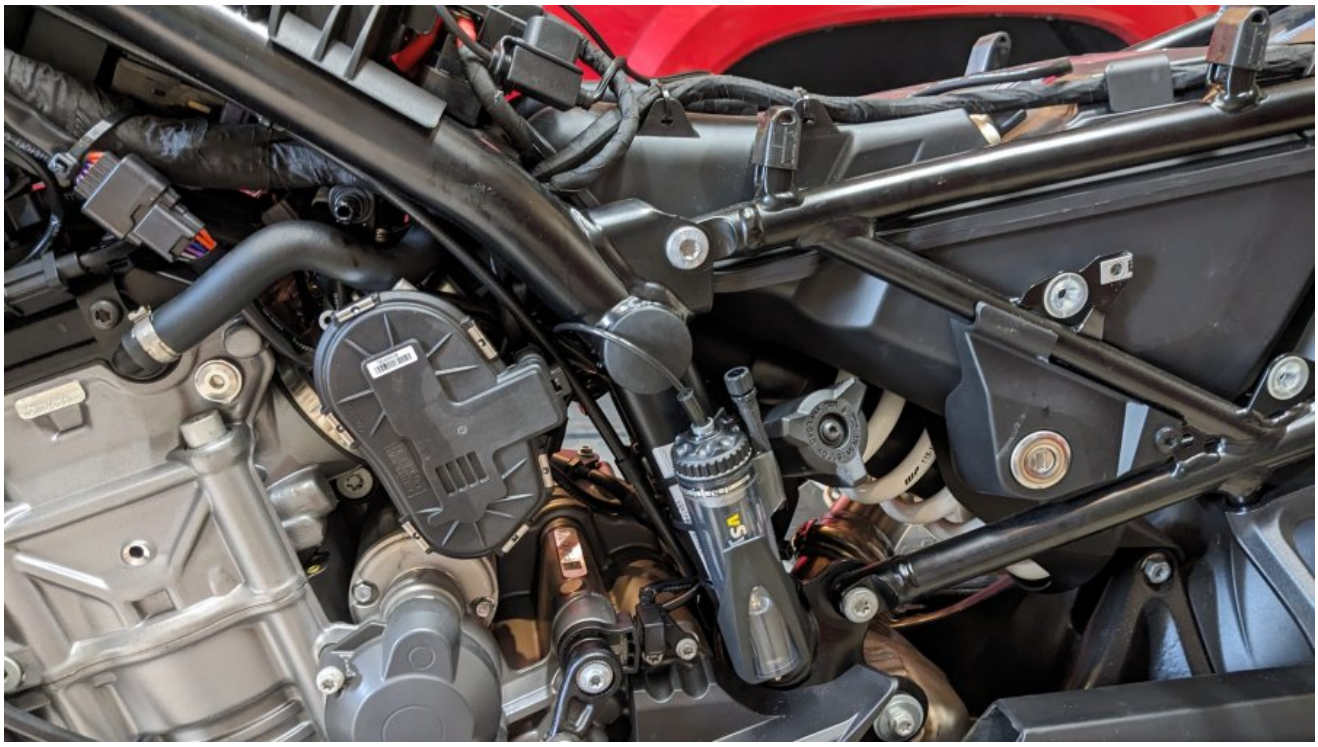


ADJUSTMENT

Step 3 - Mount the dispenser and connect the system

Scorpion Dual Injector and different routing of the delivery tubing

The pictures below show how different customers have routed the tubing to fit the Scorpion Dual Injector









Step 4 - Fill, prime and set up your vSystem

Click here for details on filling and priming the vSystem

---

xSystem Installation

General xSystem guide

The xSystem chain oiler is really easy to install and can be mounted on your bike is less than 1 hour. The installation consists of three simple steps:

- Find a place for the reservoir, either on the frame or under the seat
- Connect the reservoir to your battery
- Route the dispenser to your rear sprocket

For an example of the installation see our xSystem Installation Video .

If you have our System installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.



xSystem location suggestion.

---

eSystem Installation


General eSystem guide

The eSystem chain oiler is really easy to install and can be mounted on your bike in less than 1 hour. The installation consists of the three simple steps:

- Mount the display on your handlebars
- Connect the display and reservoir to your battery
- Attach the dispenser and route the delivery tubing to the reservoir

For an example of the installation see our eSystem v3.1 Fitting Instructions.

If you have our system installed on this specific motorcycle model, we would appreciate if you could send us pictures. With more pictures we can make the Installation even easier for all motorcyclists. Please send us your feedback and photos to technical@scottoiler.com.

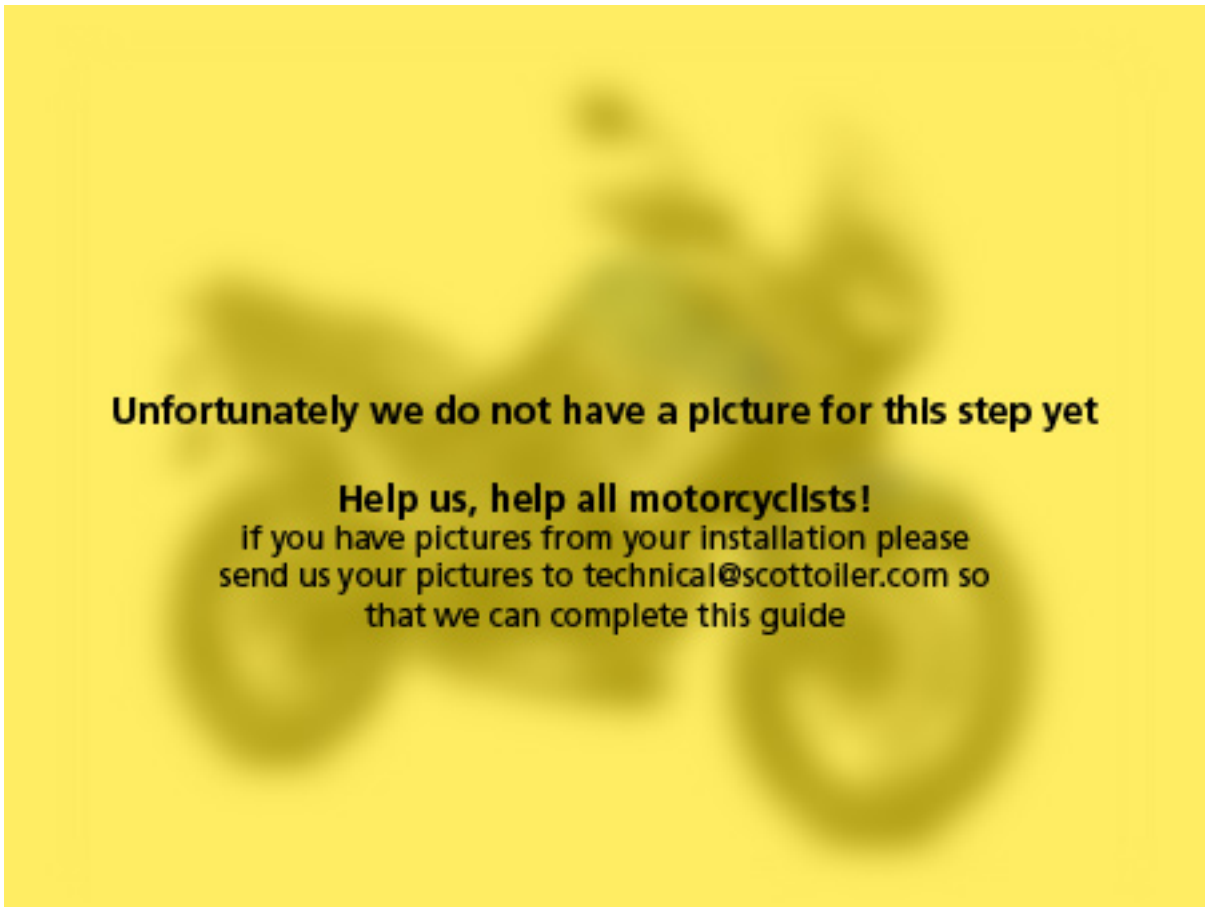

Online URL:
https://marketingengineer.de/article/890-adventure-2021-%3e-600.html