How to measure your axle’s



If your motorcycle is not listed on the fitment list**, Follow these simple steps to find our your axle measurements which will help us to locate the correct AXfix kit for your motorcycle.**

Step 1:

Using digital vernier calipers, measure the internal opening gap on both the left and right side of the front and rear axles.





Step 2:

Using a tape measure, measure the length of your spindle or opening for a single sided swinging arm. This can be done by removing the spindle completely, placing the tape measure through the internal gap or gauging by eye if possible.





Please Note: Some models will require an adapter to allow the use of AXfix such as a single sided swinging arm or where the OEM axle bolt has no opening or the opening is too narrow.

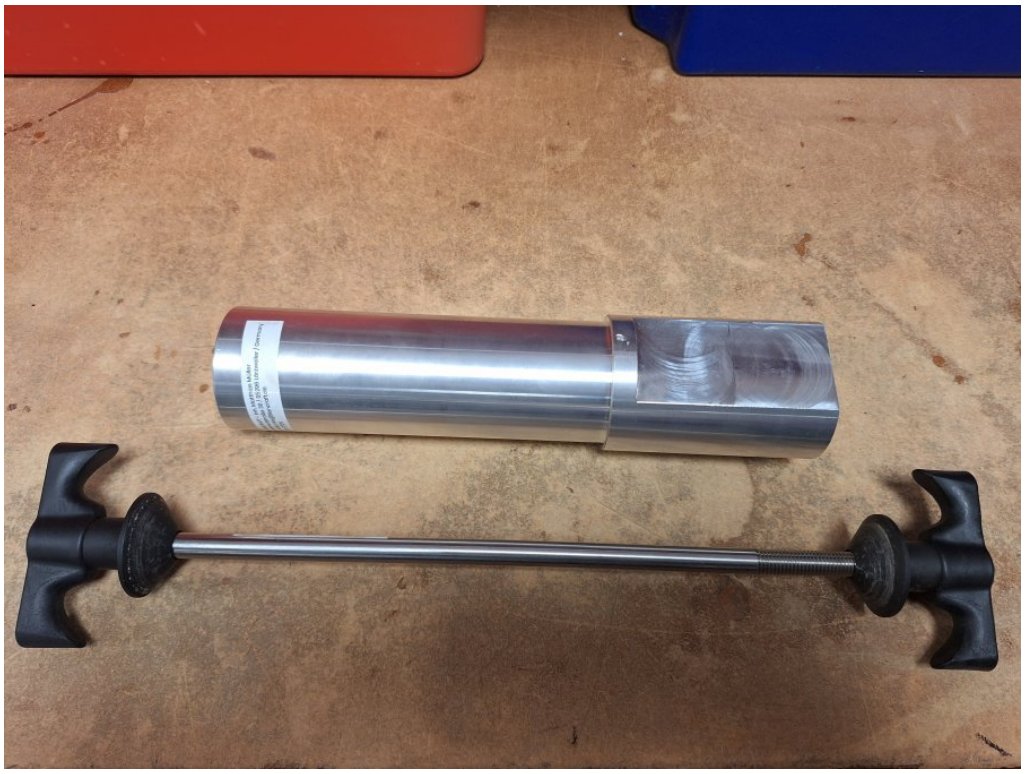

Rear Adapter for the BMW R1250GS shown.



Front Adapter for the KTM 1290 Adventure shown.

Step 3:

Send your measurements along with your Make, Model, Manufacture year and Model code (if possible) to Technical@Scottoiler.com and we can locate the correct AXfix kit for your motorcycle.

Online URL:
https://marketingengineer.de/article/how-to-measure-your-axle-s-718.html